Preface

Thank you very much for choosing our company's products. We are dedicated to providing you with the best and highest quality service.

This manual may contain some errors or inaccuracies, and we apologize for any inconvenience this may cause. We appreciate your valuable feedback, and we will regularly update the manual's content.

If you have any questions about the use of this manual and SDK, please contact our technical support team. To ensure a quick resolution of issues, please provide the following information before communication:

1. The current system platform using this SDK, such as Windows, Linux, or others, and specify the platform's detailed version number and bit (32-bit or 64-bit).
2. The model of our hardware product currently in use.
3. The version number of the SDK currently in use.
4. Detailed description of the issue, including, but not limited to, involved functional interfaces, specific error messages, etc.

Thank you for your support!

Revision History

Version No.	Release Date	Descriptions
V1.0.0	2023-12-05	Initial release
V1.0.1	2024-03-04	1. The sdk supports PD4 and FC1; 2. Add device search interface IRC_NET_SearchDevice; 3. Add the function of recording SDK running logs and setting the level of saving logs; 4. Add the query device capability interface IRC_NET_GetDevAbility, which currently only supports querying the specific pan tilt capabilities of the device; 5. Add "preset id" argument for the “delete all

		temperature measurement area interface(IRC_NET_DeleteAllTempRule); 6. Add interface for querying, modifying the entire frame temperature measurement alarm configuration; 7. Add interfaces for querying the number of shielding area, querying shielding area detail information, adding\deleting\deleting all shielding area; 8. Add “channel id” argument for querying ,setting the time title”interface; 9. Add “channel id” argument for querying ,setting the channel title”interface; 10. Add interfaces related to pan tilt, including: pan tilt control operation, querying auxiliary command status, preset points (query, management control, etc.), cruise group (query, management control, etc.), patrol (query, management control, etc.), precise positioning, 3D positioning; 11. Add interfaces for querying SD card files and downloading files
V1.0.2	2024-7-26	12. 1.Added interfaces related to IP configuration. 13. 2.Added Temperature Stream V2 interface. 14. 3.Added Video Stream V2 interface. 15. 4.Added Pan-Tilt interface. 16. 5.PC5, FC2, TN220, PD2, SI4.
V1.0.3	2024-8-14	17. 1.Revised Supported Devices Description
V1.0.4	2024-8-17	18. Added new ATR device interfaces: Get detailed temperature measurement rule information_G1, Add temperature measurement rule_G1, Modify a specific

		temperature measurement rule_G1, Get full-frame temperature measurement alarm configuration_G1, Modify full-frame temperature measurement alarm configuration_G1; 19. Added new interface to get the number of pattern configurations; 20. Added new TN400 environmental parameter correction temperature flow interface; 21. Compatible with PC2, PC4, ATR31, ATR61P.
V1.0.5	2024-10-17	22. Compatible with PC6, PC8, FC4, ATR300, ATR600P
V1.0.6	2024-12-06	23. 1.Added PTZ command table 24. 2.Added SDK basic parameter table
V1.0.7	2024-12-17	25. Added "Region Focus IRC_NET_PtzRegionFocus" interface; 26. Added "Manual Tracking IRC_NET_PtzManualTrack" interface; 27. Added "Lens Initialization IRC_NET_PtzLensInit" interface; 28. Added "Query Current Preset ID IRC_NET_QueryPtzPresetId" interface; 29. Added "Query Random Point Temperature IRC_NET_QueryRandomTemp" interface.
V1.0.8.1	2024-12-25	30. Added "Get Channel Target Recognition Configuration IRC_NET_GetTargetRecognitionConfig" interface; 31. Added "Set Channel Target Recognition Configuration IRC_NET_SetTargetRecognitionConfig"

		interface.
V1.0.9	2025-2-24	1. Added “Reboot IRC_NET_SystemReboot”interface 2. Added “Data Passthrough”related interfaces 3. Added “Get Gimbal Position IRC_NET_GetCurrentPtz”interface 4. Added “Area Scanning” related interfaces 5. Added “Boot-up\Idle Actions”related interfaces 6. Modify”Alarm Type IRC_NET_ALARM_TYPE” 7. Added Chapter 6 “Demo Source Code & Operation Guide”
V1.0.10	2025-3-20	1. Compatible with AT20, TN460U； 2. Added ranging related interfaces for PC5； 3. Added interfaces related to wiper and fill light mode settings 4. Added “IRC_NET SystemRestart” interface 5. Fix IRC_NET_GetCurrentPtz Zoom value acquisition anomaly

Chapter 1 Brief Introduction

Overview

Welcome to the SDK_NET Development Manual. This document provides a detailed description of the various functional interfaces, structures, constants, and the calling process of the SDK interface functions included in our company's Ethernet port infrared device development kit. The main features of the SDK include: device connection, live view & image/video capture, temperature measurement configuration & retrieval of temperature data, alarm data retrieval, device configuration, and other functions.

Chapter 2　Development Guide

1. Supported Systems for the SDK


Windows 32/64bit Version: Windows 11/Windows 10/Windows 8/Windows 7
Linux 32/64bit Version: Ubuntu 18.04 and above
Arm Linux 32/64bit Version: Linux_x86_64，GCC 7.5.0 and above Aarch64_linux_gnu_7.3.1 and above，GCC 7.3.1 and above

2. Device Compatibility Information

This SDK is compatible with the following types of devices from our company:

Device Models
AT20 TN Series(TN220 TN430 TN460 TN460U) ATR Series(ATR31 ATR61P ATR300 ATR600P) FC Series(FC1 FC2 FC4) PD Series(PD2 PD4) PC Series(PC2 PC4 PC5 PC6 PC8) SI4

3. Programming Process

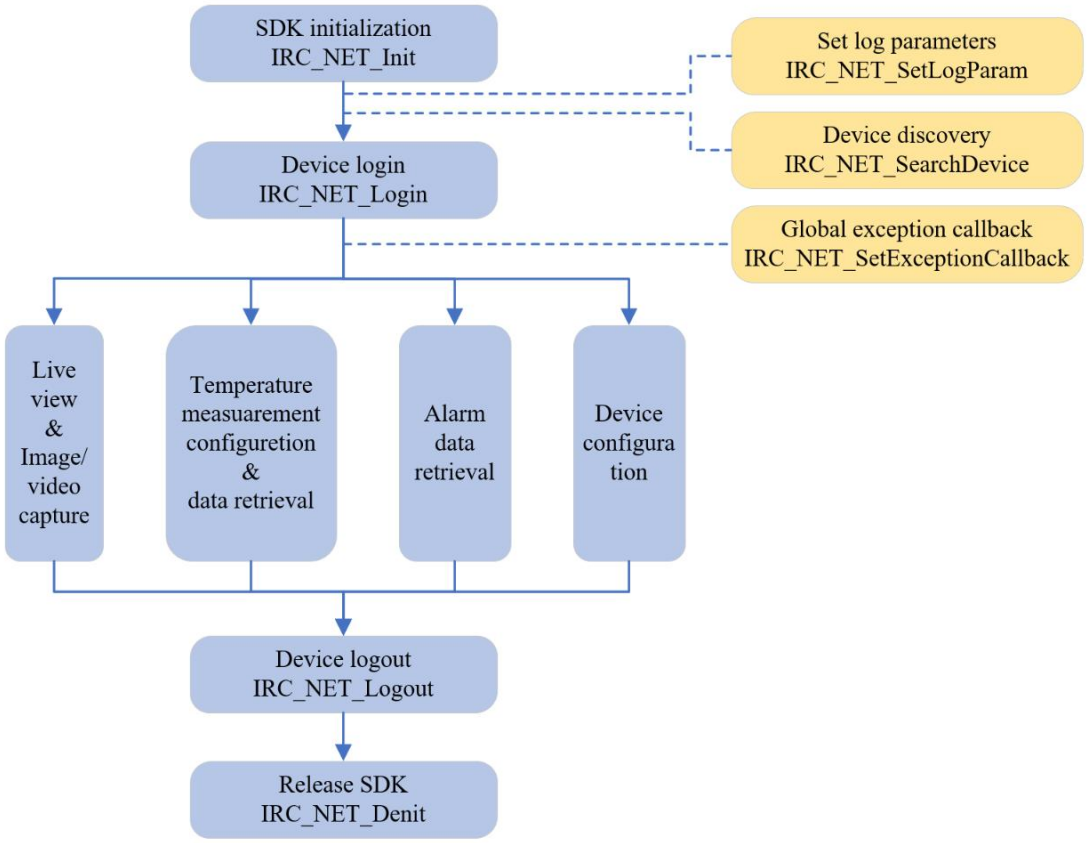

Chapter 3 Interface List

1. Device Connection

Interface Name	Interface Description
IRC_NET_Init	SDK initialization
IRC_NET_SetLogParam	Set log parameters
IRC_NET_Deinit	Release SDK
IRC_NET_SearchDevice	Device discovery
IRC_NET_Login	Device login
IRC_NET_Logout	Device logout
IRC_NET_GetDevInfo	Get basic device information
IRC_NET_GetDevAbility	Get device capability information

1) SDK Initialization IRC_NET_Init

Options	Introduction
Description	SDK initialization
Function	Int IRC_NET_Init()
Parameter	
Return Value	(Refer to the status code table for details.)
Note	

2) Set log parameters IRC_NET_SetLogParam

Options	Introduction
Description	Set log parameters
Function	int IRC_NET_SetLogParam(int level, const char* logDir, int upperLimit)
Parameter	Param [in] level log level, refer to IRC_NET_LOG_LEVEL Param [in] logDir log file path must be an absolute path and end with "\\", It is recommended that the user create it manually first Param[in] upperLimit upper limit of the number of log files, 0-no upper limit
Return Value	status code
Note	After setting the log limit, log files will be cyclically overwritten when the number reaches the upper limit.

3) Release SDK IRC_NET_Deinit

Options	Introduction

Description	Release SDK
Function	void IRC_NET_Deinit()
Parameter	
Return Value	
Note	

4) Device discovery IRC_NET_SearchDevice

Options	Introduction
Description	Device discovery
Function	int IRC_NET_SearchDevice(int timeout, IRC_NET_DEV_SEARCH_INFO searchInfos[], int inSize, int* outSize);
Parameter	Param[in] timeout query timeout, unit: ms Param[out] infos[] device search information Param[in] inSize device search information input size Param[out] outSize Device search information output size
Return Value	status code

Note	

5) Device Login IRC_NET_Login

Options	Introduction
Description	Device login
Function	int IRC_NET_Login(Const IRC_NET_LOGIN_INFO* loginInfo, IRC_NET_HANDLE* handle);
Parameter	param[in] loginInfo login information param[out] handle operation handle
Return Value	status code
Note	

6) Device Logout IRC_NET_Logout

Options	Introduction
Description	Device logout
Function	int CALL_METHOD IRC_NET_Logout(IRC_NET_HANDLE handle);
Parameter	param[in] handle operation handle
Return Value	status code
Note	

7) Get Basic Device Information IRC_NET_GetDevInfo

Options	Introduction
Description	Get basic device information
Function	int IRC_NET_GetDevInfo(IRC_NET_HANDLE handle, IRC_NET_DEV_INFO* devInfo);
Parameter	param[in] handle operation handle param[out] devInfo device information
Return Value	status code
Note	

8) Get device capability information IRC_NET_GetDevAbility

Options	Introduction
Description	Get device capability information
Function	int IRC_NET_GetDevAbility(IRC_NET_HANDLE handle, const IRC_NET_DEV_ABILITY_QUERY_CONDITION* condition, void* info,

	int inSize)
Parameter	Param [in] handle operation handle Param [in] condition The device capability type to be queried Param [out] info Specific capability information under the device capability type to be queried Param [in] size The specific size of the capability structure under the device capability type to be queried
Return Value	
Note	

2. Live View&Image/Video Capture

Interface Name	Interface Description
IRC_NET_StartPreview	Start live view
IRC_NET_VIDEO_CALLBACK	Video Callback Function
IRC_NET_StartPreview_V2	Start live view_V2
IRC_NET_VIDEO_CALLBACK_V2	Video Callback Function_V2
IRC_NET_StopPreview	Stop live view
IRC_NET_PreviewSnapshot	Live view snapshot
IRC_NET_StartPreviewRecord	Start live view recording
IRC_NET_StopPreviewRecord	Stop live view recording

1) Start Live View IRC_NET_StartPreview

Options	Introduction
Description	Start live view
Function	int IRC_NET_StartPreview(IRC_NET_HANDLE handle, const IRC_NET_PREVIEW_INFO* previewInfo, IRC_NET_VIDEO_CALLBACK videoCb, void* userData);
Parameter	param[in] handle operation handle param[in] previewInfo live view information param[in] videoCb video callback function param[in] userData User-defined data, will be passed through videoCb
Return Value	status code
Note	

2) Video Callback Function

IRC_NET_VIDEO_CALLBACK

Options	Introduction
Description	Video Callback Function
Function	void* IRC_NET_VIDEO_CALLBACK(IRC_NET_HANDLE handle, char* frame, int width, int height, void* userData);
Parameter	param[in] handle operation handle param[out] frame video frame data param[out] width video frame width param[out] height video frame height param[out] userData User-defined data, thrown out as is through videoCb
Return Value	
Note	

3) Start Live View_V2 IRC_NET_StartPreview_V2

Options	Introduction
Description	Start live view
Function	int IRC_NET_StartPreview_V2(IRC_NET_HANDLE handle, const IRC_NET_PREVIEW_INFO* previewInfo, IRC_NET_VIDEO_CALLBACK_V2 videoCb, void* userData);
Parameter	param[in] handle operation handle param[in] previewInfo preview info param[in] videoCb video callback function param[in] userData User-defined data, will be passed through videoCb
Return Value	status code
Note	

4) Video Callback Function_V2

IRC_NET_VIDEO_CALLBACK_V2

Options	Introduction
Description	Video callback function_V2
Function	void* IRC_NET_VIDEO_CALLBACK_V2(IRC_NET_HANDLE handle, IRC_NET_VIDEO_INFO_CB* videoInfo, IRC_NET_IVS_INFO_CB* ivsInfo, void* userData);
Parameter	param[in] handle operation handle param[out] videoInfo video callback param[out] ivsInfo video callback intelligent info param[out] userData User-defined data
Return Value	
Note	Added video callback intelligent information

5) Stop Live View IRC_NET_StopPreview

Options	Introduction
Description	Stop live view
Function	Int IRC_NET_StopPreview(

	IRC_NET_HANDLE handle);
Parameter	param[in] handle operation handle
Return Value	status code
Note	

6) Live View Snapshot IRC_NET_PreviewSnapshot

Options	Introduction
Description	Live view snapshot
Function	Int IRC_NET_PreviewSnapshot(IRC_NET_HANDLE handle, const char* filePath);
Parameter	param[in] handle operation handle param[in] filePath File storage path: [Save file path] + [File name] + .jpg
Return Value	status code
Note	

7) Start Live View Recording IRC_NET_StartPreviewRecord

Options	Introduction
Description	Start live view recording, MP4 format, without temperature data

Function	int IRC_NET_StartPreviewRecord(IRC_NET_HANDLE handle, const char* filePath);
Parameter	param[in] handle operation handle param[in] filePath File storage path: [Save file path] + [File name] + .mp4
Return Value	status code
Note	

8) Stop Live View Recording

IRC_NET_StopPreviewRecord

Options	Introduction
Description	Stop live view recording
Function	Int IRC_NET_StopPreviewRecord(IRC_NET_HANDLE handle);
Parameter	param[in] handle operation handle
Return Value	status code
Note	

3. Temperature Measurement Configuration & Retrieval of Temperature Data

Interface Name	Interface Description

IRC_NET_StartPullTemp	Start pulling real-time temperature stream
IRC_NET_TEMP_CALLBACK	Temperature callback function
IRC_NET_StartPullTemp_V2	Start pulling real-time temperature stream_V2
IRC_NET_TEMP_CALLBACK_V2	Temperature callback function_V2
IRC_NET_StopPullTemp	Stop pulling real-time temperature stream
IRC_NET_QueryTempRuleSize	Query the number and summary information of drawn temperature measurement rules
IRC_NET_QueryTempRule	Get detailed information for a specific temperature measurement rule
IRC_NET_QueryTempRule_G1	Get detailed information for a specific temperature measurement rule_G1
IRC_NET_AddTempRule	Add a temperature measurement rule (draw a point, line or box)
IRC_NET_AddTempRule_G1	Add a temperature measurement rule_G1 (draw a point, line or

	box)
IRC_NET_UpdateTempRule	Modify a specific temperature measurement rule
IRC_NET_UpdateTempRule_G1	Modify a specific temperature measurement rule_G1
IRC_NET_DeleteTempRule	Delete a single temperature measurement rule
IRC_NET_DeleteAllTempRule	Delete all temperature measurement rules
IRC_NET_QueryRuleTempSize	Query the number of temperatures that a rule can output
IRC_NET_QueryRuleTemp	Obtain information on the high and low temperatures of a rule
IRC_NET_QueryFrameTemp	Obtain information on the full frame's high and low temperatures
IRC_NET_GetIRGImage	Obtain thermal images in IRG format
IRC_NET_GetDlt664Image	Obtain thermal images in the National Grid 664 format
IRC_NET_QueryTempMaskSize	Query the number of temperature

	measurement shielding areas
IRC_NET_QueryTempMask	Query detailed information on the temperature measurement shielding area
IRC_NET_AddTempMask	Add temperature measurement shielding area
IRC_NET_DeleteTempMask	Delete temperature measurement shielding area
IRC_NET_DeleteAllTempMask	Delete all temperature measurement shielding areas
IRC_NET_QueryRandomTemp	Query random point temperature

1) Start Pulling Real-time Temperature Stream IRC_NET_StartPullTemp

Options	Introduction
Description	Start pulling real-time temperature stream
Function	int IRC_NET_StartPullTemp(IRC_NET_HANDLE handle, IRC_NET_TEMP_CALLBACK tempCb, void* userData);
Parameter	param[in] handle operation handle param[in] tempCb temperature callback function

	param[in] userData user self-defined data
Return Value	status code
Note	

2) Temperature Callback Function

IRC_NET_TEMP_CALLBACK

Options	Introduction
Description	Temperature callback function
Function	void* IRC_NET_TEMP_CALLBACK(IRC_NET_HANDLE handle, char* temp, int width, int height, void* userData);
Parameter	param[in] handle operation handle param[out] temp temperature frame data param[out] width temperature frame width param[out] height temperature frame height param[out] userData user defined data
Return Value	
Note	The returned temperature frame data format is: Kelvin

	temperature * 10

3) Start Pulling Real-time Temperature Stream_V2

IRC_NET_StartPullTemp_V2

Options	Introduction
Description	Start pulling real-time temperature stream
Function	int IRC_NET_StartPullTemp_V2(IRC_NET_HANDLE handle, IRC_NET_TEMP_CALLBACK_V2 tempCb, void* userData);
Parameter	param[in] handle operation handle param[in] tempCb temperature callback function param[in] userData user-defined data
Return Value	Status code
Note	

4) Temperature Callback Function_V2

IRC_NET_TEMP_CALLBACK_V2

Options	Introduction
Description	Temperature callback function_V2
Function	void* IRC_NET_TEMP_CALLBACK_V2(IRC_NET_HANDLE handle,

	IRC_NET_TEMP_INFO_CB* tempInfo, IRC_NET_TEMP_EXT_INFO_CB* extInfo, void* userData);
Parameter	param[in] handle operation handle param[out] tempInfo temperature callback temperature info param[out] extInfo temperature callback extended information param[out] userData user-defined data
Return Value	
Note	Added temperature callback extended information The returned temperature data format is: Kelvin temperature * 10

5) Stop Pulling Real-time Temperature Stream

IRC_NET_StopPullTemp

Options	Introduction
Description	Stop pulling real-time temperature stream
Function	int IRC_NET_StopPullTemp(IRC_NET_HANDLE handle);
Parameter	param[in] handle operation handle

Return Value	status code
Note	

6) Query the Number of Drawn Temperature Measurement Rules IRC_NET_QueryTempRuleSize

Options	Introduction
Description	Query the number of drawn temperature measurement rules
Function	int IRC_NET_QueryTempRuleSize(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INDEX* tempRuleIndex, int* size);
Parameter	param[in] handle operation handle param[in] tempRuleIndex rule index Note: ①In the parameter structure, presetId must be greater than or equal to 0. This is used to Get temperature measurement rule information for a specific preset.If the device is PTZ,set this field to 0 to obtain the number of entire frame. If the device is non-PTZ, set this field value to 0.

	② Set either both type and id to -1, or set them to specific type and id values. param[out] size Query the count
Return Value	status code
Note	

7) Get Detailed Information for a Specific Temperature Measurement Rule IRC_NET_QueryTempRule

Options	Introduction
Description	Get detailed information for a specific temperature measurement rule
Function	int IRC_NET_QueryTempRule(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INDEX* tempRuleIndex, IRC_NET_TEMP_RULE_INFO tempRuleInfos[], int inSize, int* outSize);
Parameter	param[in] handle operation handle param[in] tempRuleIndex Temperature measurement rule index Note:

	①In the parameter structure, presetId must be greater than or equal to 0. This is used to Get temperature measurement rule information for a specific preset.If the device is PTZ,set this field to 0 to obtain the number of entire frame. If the device is non-PTZ, set this field value to 0. ② Set either both type and id to -1, or set them to specific type and id values. param[out] tempRuleInfos[] temperature measurement rule information When retrieving rule information for a specific ID, the size of the constructed array should be 1. Otherwise, the array size should be the return value of the IRC_NET_QueryTempRuleSize function. param[in] inSize Input size of the temperature measurement rule When retrieving rule information for a specific ID, this field is set to 1. Otherwise, its value should be the return value of the IRC_NET_QueryTempRuleSize function. param[out] outSize Output size of the temperature measurement rule

Return Value	status code
Note	When you want to Get all temperature measurement rules or all temperature measurement rules of a specific type, this function needs to be used in conjunction with IRC_NET_QueryTempRuleSize

8) Get Detailed Information for a Specific Temperature Measurement Rule_G1

IRC_NET_QueryTempRule_G1

Options	Introduction
Description	Get detailed information for a specific temperature measurement rule.
Function	int IRC_NET_QueryTempRule_G1(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INDEX* tempRuleIndex, IRC_NET_TEMP_RULE_INFO_G1 tempRuleInfos[], int inSize, int* outSize);
Parameter	param[in] handle operation handle param[in] tempRuleIndex Temperature measurement rule index, where presetId must be greater than or equal

	to 0. If other parameters are set to -1, all records will be queried. param[out] tempRuleInfos[] Temperature measurement rule info param[in] inSize temperature measurement rule input size param[out] outSize temperature measurement rule output size
Return Value	status code
Note	

9) Add Temperature Measurment Rule(Draw Point/Line/Box) IRC_NET_AddTempRule

Options	Introduction
Description	Add temperature measurment rule(Draw point/line/box)
Function	int IRC_NET_AddTempRule(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INFO* tempRegionRuleInfo);

Parameter	param[in] handle operation handle param[in] tempRegionRuleInfo temperature measurement rule information
Return Value	status code
Note	

10) Add Temperature Measurment Rule_G1

IRC_NET_AddTempRule_G1

Options	Introduction
Description	Add temperature measurement rule_G1
Function	int IRC_NET_AddTempRule_G1(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INFO_G1* tempRegionRuleInfo);
Parameter	param[in] handle operation handle param[in] tempRegionRuleInfo temperature measurement rule information
Return Value	status code
Note	

11)Modify A Specific Temperature Measurement Rule

IRC_NET_UpdateTempRule

Options	Introduction
Description	Modify a specific temperature measurement rule.
Function	int IRC_NET_UpdateTempRule(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INFO* tempRegionRuleInfo);
Parameter	param[in] handle operation handle param[in] tempRegionRuleInfo temperature measurement rule information
Return Value	status code
Note	

12)Modify A Specific Temperature Measurement Rule_G1

IRC_NET_UpdateTempRule_G1

Options	Introduction
Description	Modify a specific temperature measurement rule_G1
Function	int IRC_NET_UpdateTempRule_G1(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INFO_G1*

	tempRegionRuleInfo);
Parameter	param[in] handle operation handle param[in] tempRegionRuleInfo Temperature measurement rule info
Return Value	status code
Note	

13) Delete A Single Temperature Measurement Rule IRC_NET_DeleteTempRule

Options	Introduction
Description	Delete a single temperature measurement rule
Function	int IRC_NET_DeleteTempRule(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INDEX* tempRuleIndex);
Parameter	param[in] handle operation handle param[in] tempRuleIndex temperature measurement rule index

Return Value	status code
Note	

14) Delete All Temperature Measurement Rules IRC_NET_DeleteAllTempRule

Options	Introduction
Description	Delete all temperature measurement rules
Function	int IRC_NET_DeleteAllTempRule(IRC_NET_HANDLE handle);
Parameter	param[in] handle operation handle
Return Value	status code
Note	

15) Query The Number of Temperatures That A Rule Can Output IRC_NET_QueryRuleTempSize

Options	Introduction
Description	Query the number of temperatures that a rule can output
Function	int IRC_NET_QueryRuleTempSize(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INDEX* tempRuleIndex,

	int* size);
Parameter	param[in] handle operation handle param[in] tempRuleIndex rule index Note:①In the parameter structure, presetId must be greater than or equal to 0. This is used to Get temperature measurement rule information for a specific preset. If the device is non-PTZ, set this field value to 0.②Please set the values of type and id to -1. param[out] size Query the count
Return Value	status code
Note	

16) Obtain Rule Information on the High and Low Temperature IRC_NET_QueryRuleTemp

Options	Introduction
Description	Obtain rule information on the high and low temperature
Function	int IRC_NET_QueryRuleTemp(IRC_NET_HANDLE handle, const IRC_NET_TEMP_RULE_INDEX* tempRuleIndex,

	IRC_NET_RULE_TEMP_INFO ruleTempInfos[], int inSize, int* outSize);
Parameter	param[in] handle operation handle param[in] tempRuleIndex temperature measurement rule index Note:①In the parameter structure, presetId must be greater than or equal to 0. This is used to Get temperature measurement rule information for a specific preset. If the device is non-PTZ, set this field value to 0.②Set either both type and id to -1, or set them to specific type and id values. param[out] ruleTempInfos[] rule temperature information When retrieving temperature information for a specific ID, the size of the constructed array should be 1. Otherwise, the array size should be the return value of the IRC_NET_QueryRuleTempSize function. param[in] inSize Rule temperature input size When retrieving temperature information for a specific ID, this field is set to 1. Otherwise, its value

	should be the return value of the IRC_NET_QueryRuleTempSize function. param[out] outSize Rule temperature output size
Return Value	status code
Note	When you want to Get temperature information for all temperature measurement rules or all temperature measurement rules of a specific type, this function needs to be used in conjunction with "IRC_NET_QueryRuleTempSize"

17) Obtain Information On The Full Frame's High and Low Temperatures IRC_NET_QueryFrameTemp

Options	Introduction
Description	Obtain information on the full frame's high and low temperatures.
Function	int IRC_NET_QueryFrameTemp(IRC_NET_HANDLE handle, IRC_NET_TEMP_INFO* tempInfo);
Parameter	param[in] handle operation handle param[out] ruleTempInfos[] rule temperature information
Return Value	status code

Note	

18) Obtain Thermal Images in IRG Format

IRC_NET_GetIRGImage

Options	Introduction
Description	Obtain thermal images in IRG format
Function	int IRC_NET_GetIRGImage(IRC_NET_HANDLE handle, const char* irgFilePath, const char* jpgFilePath);
Parameter	param[in] handle operation handle param[in] irgFilePath file saving path+file name+.irg param[in] jpgFilePath file saving path+file name+.jpg
Return Value	status code
Note	

19) Obtain Thermal Images in the National Grid 664 Format IRC_NET_GetDlt664Image

Options	Introduction
Description	Obtain thermal images in the National Grid 664

	format
Function	int IRC_NET_GetDLT664Image(IRC_NET_HANDLE handle, const char* filePath);
Parameter	param[in] handle operatio handle param[in] filePath file saving path+file name+.jpg
Return Value	status code
Note	

20) Query the number of temperature measurement shielding areas IRC_NET_QueryTempMaskSize

Options	Introduction
Description	Obtain the number of temperature measurement shielding areas
Function	int IRC_NET_QueryTempMaskSize(IRC_NET_HANDLE handle, const IRC_NET_TEMP_MASK_INDEX* tempMaskIndex, int* size);
Parameter	Param [in] handle operation handle Param [in] tempMaskIndex masks the area index. The presetId in the structure must be greater than or

	equal to 0. If 0, it means there are no preset points. When id is -1, query all Param [out] size query quantity
Return Value	status code
Note	

21) Query detailed information on the temperature measurement shielding area IRC_NET_QueryTempMask

Options	Introduction
Description	Query detailed information on the temperature measurement shielding area
Function	int IRC_NET_QueryTempMask(IRC_NET_HANDLE handle, const IRC_NET_TEMP_MASK_INDEX* tempMaskIndex, IRC_NET_TEMP_MASK_INFO tempMaskInfos[], int inSize, int* outSize);
Parameter	Param [in] handle operation handle Param [in] tempMaskIndex Mask area index, presetId must be greater than or equal to 0

	Param tempMaskInfos temperature measurement shielding area information Param [in] inSize Input size of temperature measurement shielding area Param [out] outSize Output size of temperature measurement shielding area
Return Value	status code
Note	

22) Add temperature measurement shielding area IRC_NET_AddTempMask

Options	Introduction
Description	Add temperature measurement shielding area
Function	int IRC_NET_AddTempMask(IRC_NET_HANDLE handle, const IRC_NET_TEMP_MASK_INFO* tempMaskInfo);
Parameter	Param [in] handle operation handle Param [in] tempMaskInfo Temperature measurement shielding area information
Return Value	status code
Note	

23) Delete temperature measurement shielding area

IRC_NET_DeleteTempMask

Options	Introduction
Description	Delete temperature measurement shielding area.
Function	int IRC_NET_DeleteTempMask(IRC_NET_HANDLE handle, const IRC_NET_TEMP_MASK_INDEX* tempMaskIndex);
Parameter	Param [in] handle operation handle Param [in] tempMaskIndex Mask Area Index
Return Value	status code
Note	

24) Delete all temperature measurement shielding areas

IRC_NET_DeleteAllTempMask

Options	Introduction
Description	Delete all temperature measurement shielding areas.
Function	int IRC_NET_DeleteAllTempMask(IRC_NET_HANDLE handle, int presetId);
Parameter	Param [in] handle operation handle

	Param [in] presetId
Return Value	status code
Note	

25) Query random point temperature

IRC_NET_QueryRandomTemp

Options	Introduction
Description	Query random point temperature
Function	int IRC_NET_QueryRandomTemp(IRC_NET_HANDLE handle, const IRC_NET_POINT* point, float* temp);
Parameter	param[in] handle operation handle Point[in] Query point, using the 8192 coordinate system temp[out] temperature value
Return Value	Status code
Note	

4.Alarm Data Retrieval

Interface Name	Interface Description

IRC_NET_SetExceptionCallback	Global exception callback
IRC_NET_EXCEPTION_CALLBACK	exception callback function
IRC_NET_SubscribeAlarm	Subscribe to alarms
IRC_NET_ALARM_CALLBACK	Alarm callback function
IRC_NET_UnsubscribeAlarm	Unsubscribe from alarms
IRC_NET_QueryFrameTempAlarmConfig	Query the entire frame temperature measurement alarm configuration
IRC_NET_QueryFrameTempAlarmConfig_G1	Query the entire frame temperature measurement alarm configuration_G1
IRC_NET_UpdateFrameTempAlarmConfig	Modify the entire frame temperature measurement alarm configuration
IRC_NET_UpdateFrameTempAlarmConfig_G1	Modify the entire frame temperature measurement alarm configuration_G1

1) Global Exception Callback

IRC_NET_SetExceptionCallback

Options	Introduction
Description	Exception callback registration
Function	int IRC_NET_SetExceptionCallback(IRC_NET_HANDLE handle, IRC_NET_EXCEPTION_CALLBACK exceptionCb, void* userData);
Parameter	param[in] handle operatio handle param[in] exceptionCb exception callback function param[in] userData user self-defined data
Return Value	status code
Note	

2) exception callback function

IRC_NET_EXCEPTION_CALLBACK

Options	Introduction
Description	exception callback function, push exception information after registration
Function	void IRC_NET_EXCEPTION_CALLBACK(

	IRC_NET_HANDLE handle, int exceptionType, void* userData);
Parameter	param[in] handle operatio handle param[out] exceptionType exception type, refer to IRC_NET_EXCEPTION_TYPE param[out] userData self-defined data
Return Value	
Note	With the "Global Exception Callback" function. For handling methods of exception types, please refer to the demo.

3) Subscribe to Alarms IRC_NET_SubscribeAlarm

Options	Introduction
Description	Subscribe to alarms and register the alarm callback.
Function	int IRC_NET_SubscribeAlarm(IRC_NET_HANDLE handle, IRC_NET_ALARM_CALLBACK alarmCb, void* userData);
Parameter	param[in] handle operation handle param[in] alarmCb alarm callback function

	param[in] userData user self-defined data
Return Value	status code
Note	

4) Alarm callback function

IRC_NET_ALARM_CALLBACK

Options	Introduction
Description	Alarm callback function,push alarm information after registration
Function	void IRC_NET_ALARM_CALLBACK(IRC_NET_HANDLE handle, int alarmType, void* alarmInfo, void* userData);
Parameter	param[in] handle operation handle param[out] alarmType alarm type， refer to IRC_NET_ALARM_TYPE param[out] alarmInfo alarm information param[out] userData self-defined data
Return Value	
Note	With the "Subscribe to alarms" function. For handling methods of alarm types, please refer to the

	demo.

5) Unsubscribe from Alarms

IRC_NET_UnsubscribeAlarm

Options	Introduction
Description	Unsubscribe from alarms
Function	int IRC_NET_UnsubscribeAlarm(IRC_NET_HANDLE handle);
Parameter	param[in] handle operation handle
Return Value	status code
Note	

6) Query the entire frame temperature measurement alarm configuration

IRC_NET_QueryFrameTempAlarmConfig

Options	Introduction
Description	Obtain the entire frame temperature measurement alarm configuration
Function	int IRC_NET_QueryFrameTempAlarmConfig(IRC_NET_HANDLE handle, IRC_NET_TEMP_FRAME_ALARM_CONFIG* alarmConfig);

Parameter	Param [in] handle operation handle Param [out] alarm configuration for whole frame temperature measurement alarm
Return Value	status code
Note	

7) Query the entire frame temperature measurement alarm configuration_G1

IRC_NET_QueryFrameTempAlarmConfig_G1

Options	Introduction
Description	Obtain the entire frame temperature measurement alarm configuration_G1
Function	int IRC_NET_QueryFrameTempAlarmConfig_G1(IRC_NET_HANDLE handle, IRC_NET_FRAME_TEMP_ALARM_CONFIG_G1 * alarmConfig);
Parameter	param[in] handle operation handle param[out] alarmConfig full-frame temperature measurement alarm configuration
Return Value	status code
Note	

8) Modify the entire frame temperature measurement alarm IRC_NET_UpdateFrameTempAlarmConfig

Options	Introduction
Description	Modify the entire frame temperature measurement alarm
Function	Int IRC_NET_UpdateFrameTempAlarmConfig(IRC_NET_HANDLE handle, const IRC_NET_TEMP_FRAME_ALARM_CONFIG* alarmConfig);
Parameter	Param [in] handle operation handle Param [out] alarm configuration for whole frame temperature measurement alarm
Return Value	status code
Note	

9) Modify full-frame temperature measurement alarm configuration_G1 IRC_NET_UpdateFrameTempAlarmConfig_G1

Options	Introduction

Description	Modify full-frame temperature measurement alarm configuration
Function	Int IRC_NET_UpdateFrameTempAlarmConfig(IRC_NET_HANDLE handle, const IRC_NET_TEMP_FRAME_ALARM_CONFIG* alarmConfig);
Parameter	param[in] handle operation handle param[out] alarmConfig full-frame temperature measurement alarm configuration
Return Value	status code
Note	

5.Device Configuration

Interface Name	Interface Description
System configuration	
IRC_NET_SyncSystemTime	Synchronize system time
IRC_NET_CorrectShutter	Shutter/background correction
IRC_NET_GetTempBarState	Get temperature bar status
IRC_NET_SetTempBarState	Set temperature bar status
IRC_NET_GetPalleteType	Get color pallette index
IRC_NET_SetPalleteType	Set color palette index
IRC_NET_GetTempLevel	Get temperature measurement

	range
IRC_NET_SetTempLevel	Set temperature measurement range
IRC_NET_GetOSDState	Get OSD (On-Screen Display) overall status
IRC_NET_SetOSDState	Set OSD overall status
IRC_NET_GetOSDTimeTitleInfo	Get time title
IRC_NET_SetOSDTimeTitleInfo	Set time title
IRC_NET_GetOSDChannelTitleInfo	Get channel title
IRC_NET_SetOSDChannelTitleInfo	Set channel title
IRC_NET_GetLaserDistanceOsdParam	Get Laser Distance OSD parameters
IRC_NET_SetLaserDistanceOsdParam	Set Laser Distance OSD parameters
IRC_NET_GetEnvParam	Get environmental parameters
IRC_NET_SetEnvParam	Set environmental parameters
IRC_NET_GetFrameRate	Get temperature measurement frame rate
IRC_NET_SetFrameRate	Set temperature measurement frame rate

IRC_NET_GetTempSpanInfo	Get temperature span information
IRC_NET_SetTempSpanInfo	Set temperature span information
IRC_NET_GetIpConfig	Get IP Configuration
IRC_NET_SetIpConfig	Set IP Configuration
IRC_NET_QueryFileSize	Query the number of SD card files
IRC_NET_QueryFile	Query SD card files
IRC_NET_StartDownloadFile	Download SD card files
IRC_NET_GetDownloadProgress	Check download progress
IRC_NET_StopDownloadFile	Stop downloading
IRC_NET_SetTargetRecognitionConfig	Set Channel Target Recognition Configuration
IRC_NET_GetTargetRecognitionConfig	Get Channel Target Recognition Configuration
IRC_NET_SystemReboot	Reboot
IRC_NET_SetTransparentState	Set Passthrough State
IRC_NET_TransparentData	Data Passthrough
IRC_NET_GetWiperConfigInfo	Get wiper configuration
IRC_NET_SetWiperConfigInfo	Set wiper configuration
IRC_NET_GetFillLightConfigInfo	Get fill light configuration

IRC_NET_SetFillLightConfigInfo	Set fill light configuration
IRC_NET_SystemRestart	Power Restart
PTZ Control	
IRC_NET_PtzControl	Pan tilt control operation
IRC_NET_GetPtzAuxFuncState	Query the status of PTZ auxiliary command
IRC_NET_GetLaserDistance	Execute laser ranging
IRC_NET_QueryPtzPresetSize	Query the number of preset points
IRC_NET_QueryPtzPreset	Query preset point information
IRC_NET_PtzPresetControl	Preset point control
IRC_NET_QueryPtzPresetId	Query Current Preset ID
IRC_NET_QueryPtzTourSize	Query the number of cruise group configurations
IRC_NET_QueryPtzTour	Query cruise group configuration
IRC_NET_PtzTourControl	Cruise control
IRC_NET_QueryPtzPatternSize	Query Pattern Configuration Quantity
IRC_NET_QueryPtzPattern	Query patrol configuration

IRC_NET_PtzPatternControl	Patrol control
IRC_NET_ResetPtzConfig	Cloud tilt restoration default configuration
IRC_NET_PtzPrecisePosition	Pan tilt precise positioning
IRC_NET_Ptz3DPosition	3D positioning
IRC_NET_SwivelControl	Pan/Tilt Control
IRC_NET_PtzRegionFocus	Region Focus
IRC_NET_PtzManualTrack	Manual Tracking
IRC_NET_PtzLensInit	Lens Initialization
IRC_NET_GetCurrentPtz	Get Gimbal Position
IRC_NET_QueryPtzRegionScanInfo	Query Area Scanning Information
IRC_NET_SetPtzRegionScanInfo	Set Area Scanning Information
IRC_NET_DeletePtzRegionScanInfo	Delete Area Scanning Information
IRC_NET_PtzRegionScanControl	Area Scanning Control
IRC_NET_QueryPtzBootActionInfo	Query Boot-up Actions
IRC_NET_SetPtzBootActionInfo	Set Boot-up Actions
IRC_NET_QueryPtzParkActionInfo	Query Idle Actions

IRC_NET_SetPtzParkActionInfo	Set Idle Actions

5.1 System Configuration

1) Synchronize System Time IRC_NET_SyncSystemTime

Options	Introduction
Description	Synchronize system time
Function	int IRC_NET_SyncSystemTime(IRC_NET_HANDLE handle, const char* datetime);
Parameter	param[in] handle operation handle param[in] datetime Synchronize time，the format is “2020-05-21 12:22:33”
Return Value	status code
Note	

2) Shutter Correction IRC_NET_CorrectShutter

Options	Introduction
Description	Implementing shutter calibration function
Function	int IRC_NET_CorrectShutter(IRC_NET_HANDLE handle);
Parameter	param[in] handle operation handle
Return Value	status code

Note	

3) Get Temperature Color Palette Bar Display Status IRC_NET_GetTempBarState

Options	Introduction
Description	Get the display status of the temperature color palette bar on the real-time preview page sidebar.
Function	int IRC_NET_GetTempBarState(IRC_NET_HANDLE handle, int* state);
Parameter	param[in] handle operation handle param[out] state temperature bar status，0: off 1:on
Return Value	status code
Note	

4) Set the Temperature Color Palette Bar Display Status IRC_NET_SetTempBarState

Options	Introduction
Description	Set the display status of the temperature color palette bar on the real-time preview page sidebar.
Function	int IRC_NET_SetTempBarState(IRC_NET_HANDLE handle,

	int state);
Parameter	param[in] handle operation handle param[in] state temperature bar status，0: off　1:on
Return Value	status code
Note	

5) Get Current Color Pallette Index IRC_NET_GetPalleteType

Options	Introduction
Description	Get the current pseudocolor index for the live preview image
Function	int IRC_NET_GetPalleteType(IRC_NET_HANDLE handle, int* palleteType);
Parameter	param[in] handle operation handle param[out] palleteType　Color Palette type，refer to IRC_NET_PALETTE_TYPE
Return Value	status code
Note	

6) Set Color Palette Index IRC_NET_SetPalleteType

Options	Introduction

Description	Set color palette index
Function	int IRC_NET_SetPalleteType(IRC_NET_HANDLE handle, int palleteType);
Parameter	param[in] handle operation handle param[in] palleteType color palette type，refer to IRC_NET_PALETTE_TYPE
Return Value	status code
Note	

7) Get Temperature Measurement Range

IRC_NET_GetTempLevel

Options	Introduction
Description	Get temperature measurement range
Function	int IRC_NET_GetTempLevel(IRC_NET_HANDLE handle, int* level);
Parameter	param[in] handle operation handle param[out] level temperature measurement range, refer to IRC_NET_TEMP_LEVEL_TYPE
Return Value	status code
Note	

8) Set Temperature Measurement Range

IRC_NET_SetTempLevel

Options	Introduction
Description	Set temperature measurement range
Function	int IRC_NET_SetTempLevel(IRC_NET_HANDLE handle, int level);
Parameter	param[in] handle operation handle param[in] level temperature measurement range, refer to IRC_NET_TEMP_LEVEL_TYPE
Return Value	status code
Note	

9) Get OSD (On-Screen Display) Overall Status

IRC_NET_GetOSDState

Options	Introduction
Description	Get OSD overall status
Function	int IRC_NET_GetOSDState(IRC_NET_HANDLE handle, int* osdMode);
Parameter	param[in] handle operation handle

	param[out] osdMode temperature measurement information OSD mode; 0 on，2 off
Return Value	status code
Note	

10)Set OSD (On-Screen Display) Overall Status IRC_NET_SetOSDState

Options	Introduction
Description	Set OSD overall status
Function	int IRC_NET_SetOSDState(IRC_NET_HANDLE handle, int osdMode);
Parameter	param[in] handle operation handle param[in] osdMode temperature measurement information OSD mode; 0 on，2 off
Return Value	status code
Note	

11)Get Time Title IRC_NET_GetOSDTimeTitleInfo

Options	Introduction

Description	Get time title
Function	int IRC_NET_GetOSDTimeTitleInfo(IRC_NET_HANDLE handle, IRC_NET_OSD_TIME_TITLE_INFO* timeTitleInfo);
Parameter	param[in] handle operation handle param[out] timeTitleInfo time title information
Return Value	status code
Note	

12) Set Time Title IRC_NET_SetOSDTimeTitleInfo

Options	Introduction
Description	Set time title
Function	int IRC_NET_SetOSDTimeTitleInfo(IRC_NET_HANDLE handle, const IRC_NET_OSD_TIME_TITLE_INFO* timeTitleInfo);
Parameter	param[in] handle operation handle param[in] timeTitleInfo time title information
Return Value	status code
Note	

13) Get Channel Title

IRC_NET_GetOSDChannelTitleInfo

Options	Introduction
Description	Get channel title
Function	int IRC_NET_GetOSDChannelTitleInfo(IRC_NET_HANDLE handle, IRC_NET_OSD_CHANNEL_TITLE_INFO* channelTitleInfo);
Parameter	param[in] handle operation handle param[out] channelTitleInfo channel title information
Return Value	status code
Note	

14) Set Channel Title IRC_NET_SetOSDChannelTitleInfo

Options	Introduction
Description	Set channel title
Function	int IRC_NET_SetOSDChannelTitleInfo(IRC_NET_HANDLE handle, const IRC_NET_OSD_CHANNEL_TITLE_INFO* channelTitleInfo);
Parameter	param[in] handle operation handle

	param[in] channelTitleInfo channel title information
Return Value	status code
Note	

15) Get Laser Distance OSD parameters

IRC_NET_GetLaserDistanceOsdParam

Options	Introduction
Description	Get Laser Distance OSD parameters
Function	int IRC_NET_GetLaserDistanceOsdParam(IRC_NET_HANDLE handle, int channel, IRC_NET_LASER_DISTANCE_OSD_PARAM* laserDistanceOsdParam);
Parameter	param[in] handle operation handle param[in] channel channel param[out] laserDistanceOsdParam Laser Distance OSD parameters
Return Value	status code
Note	

16) Set Laser Distance OSD parameters

IRC_NET_SetLaserDistanceOsdParam

Options	Introduction
Description	Set Laser Distance OSD parameters
Function	int IRC_NET_SetLaserDistanceOsdParam(IRC_NET_HANDLE handle, int channel, const IRC_NET_LASER_DISTANCE_OSD_PARAM* laserDistanceOsdParam);
Parameter	param[in] handle operation handle param[in] channel channel param[in] laserDistanceOsdParam Laser Distance OSD parameters
Return Value	status code
Note	

17) Get Environmental Parameters of the Full Frame

IRC_NET_GetEnvParam

Options	Introduction
Description	Get environmental parameters of the full frame

Function	int IRC_NET_GetEnvParam(IRC_NET_HANDLE handle, IRC_NET_ENV_PARAM* envParam);
Parameter	param[in] handle operation handle param[out] envParam environmental parameters
Return Value	status code
Note	

18) Set Environmental Parameters of the Full Frame IRC_NET_SetEnvParam

Options	Introduction
Description	Set environmental parameters of the full frame
Function	int IRC_NET_SetEnvParam(IRC_NET_HANDLE handle, const IRC_NET_ENV_PARAM* envParam);
Parameter	param[in] handle operation handle param[in] envParam environmental parameters
Return Value	status code
Note	

19) Get Temperature Measurement Frame Rate

IRC_NET_GetFrameRate

Options	Introduction
Description	Get temperature measurement frame rate
Function	int IRC_NET_GetFrameRate(IRC_NET_HANDLE handle, int* rate);
Parameter	param[in] handle operation handle param[out] rate temperature measurement frame rate, range[1, frame rate], 12 by default, support 25 frames at most
Return Value	status code
Note	

20) Set Temperature Measurement Frame Rate

IRC_NET_SetFrameRate

Options	Introduction
Description	Set temperature measurement frame rate
Function	int IRC_NET_SetFrameRate(IRC_NET_HANDLE handle, int rate);

Parameter	param[in] handle operation handle param[in] rate temperature measurement frame rate，range[1，frame rate]，12 by default, support 25 frames at most
Return Value	status code
Note	

21) Get Temperature Span Information

IRC_NET_GetTempSpanInfo

Options	Introduction
Description	Get temperature span information
Function	int IRC_NET_GetTempSpanInfo(IRC_NET_HANDLE handle, IRC_NET_TEMP_SPAN_INFO* tempSpanInfo);
Parameter	param[in] handle operation handle param[out] tempSpanInfo temperature span information
Return Value	status code
Note	

22) Set Temperature Span Information

IRC_NET_SetTempSpanInfo

Options	Introduction
Description	Set temperature span information
Function	int IRC_NET_SetTempSpanInfo(IRC_NET_HANDLE handle, const IRC_NET_TEMP_SPAN_INFO* tempSpanInfo);
Parameter	param[in] handle operation handle param[in] tempSpanInfo temperature span information
Return Value	status code
Note	

23) Get IP Configuration IRC_NET_GetIpConfig

Options	Introduction
Description	Get IP configuration
Function	IRC_NET_GetIpConfig(IRC_NET_HANDLE handle, IRC_NET_IP_CONFIG* ipConfig);
Parameter	param[in] handle operation handle param[out] ipConfig ip configuration

Return Value	status code
Note	

24) Set IP Configurations IRC_NET_SetIpConfig

Options	Introduction
Description	Set IP configurations
Function	IRC_NET_SetIpConfig(IRC_NET_HANDLE handle, const IRC_NET_IP_CONFIG* ipConfig)
Parameter	param[in] handle operation handle param[in] ipConfig ip configurations
Return Value	status code
Note	

25) Get the number of files on the SD card IRC_NET_QueryFileSize

Options	Introduction
Description	Get the number of files on the SD card
Function	int IRC_NET_QueryFileSize(IRC_NET_HANDLE handle, const IRC_NET_FILE_QUERY_PARAM* queryParam, int* size);
Parameter	param[in] handle operation handle

	param[in] condition Query conditions param[out] size Query quantity
Return Value	status code
Note	

26) Get SD card files IRC_NET_QueryFile

Options	Introduction
Description	Get SD card files
Function	int IRC_NET_QueryFile(IRC_NET_HANDLE handle, const IRC_NET_FILE_QUERY_PARAM* queryParam, IRC_NET_FILE_INFO fileInfo[], int inSize, int* outSize);
Parameter	param[in] handle operation handle param[in] condition query conditions param[out] fileInfo[] file info param[in] inSize File information input size param[out] outSize File information output size
Return Value	status code
Note	

27) Download files on SD card

IRC_NET_StartDownloadFile

Options	Introduction
Description	Download files on SD card
Function	int IRC_NET_StartDownloadFile(IRC_NET_HANDLE handle, const IRC_NET_FILE_DOWNLOAD_INFO* downloadInfo);
Parameter	param[in] handle operation handle param[in] downloadInfo download info
Return Value	status code
Note	

28) Query download progress

IRC_NET_GetDownloadProgress

Options	Introduction
Description	Query download progress
Function	int IRC_NET_GetDownloadProgress(IRC_NET_HANDLE handle, int fileHandle, IRC_NET_FILE_DOWNLOAD_PROGRESS*

	downloadProgress);
Parameter	param[in] handle operation handle param[in] fileHandel download handle， IRC_NET_DownloadSDFile return value param[out] downloadProgress download process
Return Value	-1 indicates failure, 0-100 represents download progress, 100 means download completion. The normal range is 0-100; if 200 is returned, it indicates a network exception.
Note	

29) Stop Download IRC_NET_StopDownloadFile

Options	Introduction
Description	Stop download
Function	int IRC_NET_StopDownloadFile(IRC_NET_HANDLE handle, int fileHandle);
Parameter	param[in] handle operation handle param[in] fileHandel down handle, IRC_NET_StartDownloadFile return value
Return Value	status code
Note	

30) Set Channel Target Recognition Configuration

IRC_NET_SetTargetRecognitionConfig

Options	Introduction
Description	Set channel target recognition configuration
Function	IRC_NET_SetTargetRecognitionConfig(IRC_NET_ HANDLE handle, int channel, const IRC_NET_IP_TARGET_RECOGNITION_CONFIG * targetRecognitionConfig)
Parameter	param[in] handle operation handle param[in] channel channle No. param[in] targetRecognitionConfig channel target recognition configuration
Return Value	status code
Note	

31) Get Channel Target Recognition Configuration

IRC_NET_GetTargetRecognitionConfig

Options	Introduction
Description	Get channel target recognition configuration
Function	IRC_NET_GetTargetRecognitionConfig(IRC_NET_ HANDLE handle, int channel,

	IRC_NET_IP_TARGET_RECOGNITION_CONFIG * targetRecognitionConfig)
Parameter	param[in] handle operation handle param[in] channel channel No. param[out] targetRecognitionConfig channel target recognition configuration
Return Value	status code
Note	

32) Reboot IRC_NET_SystemReboot

Options	Introduction
Description	Reboot
Function	int IRC_NET_SystemReboot(IRC_NET_HANDLE handle)
Parameter	param[in] handle operation handle
Return Value	status code
Note	

33) Set Passthrough State IRC_NET_SetTransparentState

Options	Introduction
Description	Set passthrough state
Function	int IRC_NET_SetTransparentState(

	IRC_NET_HANDLE handle, int state)
Parameter	param[in] handle operation handle param[in] state Passthrough state，0：close 1：open
Return Value	status code
Note	

34)Data Passthrough IRC_NET_TransparentData

Options	Introduction
Description	Data Passthrough
Function	int IRC_NET_TransparentData(IRC_NET_HANDLE handle, const char* sendBuf, int sendBufSize, char* recvBuf, int recvBufInSize, int* recvBufOutSize, int timeout)
Parameter	param[in] handle operation handle param[in] sendBuf Send command Buffer param[in] sendBufSize Send command size param[out] recvBuf Receive command Buffer

	param[in] recvBufInSize Receive command size，1024 max param[out] recvBufOutSize True receive command size param[in] timeout timeout, unit: ms
Return Value	status code
Note	need to use the 'IRC_NET_SetTransparentState' function to enable transparent transmission

35) Get wiper configuration

IRC_NET_GetWiperConfigInfo

Options	Introduction
Description	Get wiper configuration information
Function	int IRC_NET_GetWiperConfigInfo(IRC_NET_HANDLE handle, int* wiperMode);
Parameter	param[in] handle operation handle param[out] wiperMode wiper mode 0 Auto，1 Manual
Return Value	status code
Note	

36) Set wiper configuration

IRC_NET_SetWiperConfigInfo

Options	Introduction
Description	Set wiper configuration information
Function	int IRC_NET_SetWiperConfigInfo(IRC_NET_HANDLE handle, int wiperMode);
Parameter	param[in] handle operation handle param[in] wiperMode wiper mode 0 Auto， 1 Manual
Return Value	status code
Note	

37) Get fill light configuration

IRC_NET_GetFillLightConfigInfo

Options	Introduction
Description	Get fill light configuration
Function	int IRC_NET_GetFillLightConfigInfo(IRC_NET_HANDLE handle, IRC_NET_FILL_LIGHT_CONFIG_INFO* fillLightConfigInfo);
Parameter	param[in] handle operation handle

	param[out] fillLightConfigInfo fill light configuration
Return Value	status code
Note	

38) Set fill light configuration

IRC_NET_SetFillLightConfigInfo

Options	Introduction
Description	Data Passthrough
Function	int IRC_NET_SetFillLightConfigInfo(IRC_NET_HANDLE handle, const IRC_NET_FILL_LIGHT_CONFIG_INFO* fillLightConfigInfo);
Parameter	param[in] handle operation handle param[in] fillLightConfigInfo fill light configuration
Return Value	status code
Note	

39) Power Restart IRC_NET_SystemRestart

Options	Introduction
Description	Power Restart
Function	int IRC_NET_SystemRestart(IRC_NET_HANDLE handle);

Parameter	param[in] handle operation handle
Return Value	status code
Note	

5.2 PTZ Control

1) Pan tilt control operation IRC_NET_PtzControl

Options	Introduction
Description	Pan tilt control operation
Function	int IRC_NET_PtzControl(IRC_NET_HANDLE handle, const IRC_NET_PTZ_CONTROL* ptzControl);
Parameter	Param [in] handle operation handle Param [in] ptzControl pan tilt control
Return Value	status code
Note	

2) Query the status of PTZ auxiliary command IRC_NET_GetPtzAuxFuncState

Options	Introduction
Description	Query the status of PTZ auxiliary command
Function	int IRC_NET_GetPtzAuxFuncState(IRC_NET_HANDLE handle,

	IRC_NET_PTZ_AUX_FUNC_STATE* ptzAuxFuncState);
Parameter	Param [in] handle operation handle Param [out] ptzAuxFuncState PTZ auxiliary function status
Return Value	status code
Note	

3) Execute laser ranging IRC_NET_GetLaserDistance

Options	Introduction
Description	Execute laser ranging
Function	int IRC_NET_GetLaserDistance(IRC_NET_HANDLE handle, int* distance);
Parameter	Param [in] handle operation handle Param [out] distance Laser Ranging Distance
Return Value	status code
Note	need to enable laser ranging first (enable it on the Web)

4) Query the number of presets

IRC_NET_QueryPtzPresetSize

Options	Introduction
Description	Query the number of presets
Function	int IRC_NET_QueryPtzPresetSize(IRC_NET_HANDLE handle, int* size);
Parameter	Param [in] handle operation handle Param [out] size query quantity
Return Value	status code
Note	

5) Query preset information IRC_NET_QueryPtzPreset

Options	Introduction
Description	Query preset information
Function	int IRC_NET_QueryPtzPreset(IRC_NET_HANDLE handle, IRC_NET_PTZ_PRESET_INFO ptzPresetInfo[], int inSize, int* outSize);
Parameter	Param [in] handle operation handle

	Param ptzPresetInfo Param [in] inSize preset input size Param [out] outSize preset output size
Return Value	status code
Note	

6) Preset control IRC_NET_PtzPresetControl

Options	Introduction
Description	Preset control
Function	int IRC_NET_PtzPresetControl(IRC_NET_HANDLE handle, int ptzPresetCmd, const IRC_NET_PTZ_PRESET_INFO* ptzPresetInfo);
Parameter	Param [in] handle operation handle Param [in] ptzPrepatCmd preset control command, refer to IRC-NET-PTZ-PRESET-CMD-TYPE Param [in] ptzPresetInfo preset information
Return Value	status code
Note	

7) Query Current Preset ID

IRC_NET_QueryPtzPresetId

Options	Introduction
Description	Query current preset ID
Function	IRC_NET_QueryPtzPresetId(IRC_NET_HANDLE handle, int* ptzPresetId)
Parameter	param[in] handle operation handle param[out] ptzPresetId current preset ID
Return Value	status code
Note	

8) Query the number of tour configurations

IRC_NET_QueryPtzTourSize

Options	Introduction
Description	Query the number of tour configurations
Function	int IRC_NET_QueryPtzTourSize(IRC_NET_HANDLE handle, int* size);
Parameter	Param [in] handle operation handle Param [out] size query quantity
Return Value	status code

Note	

9) Query tour configuration information

IRC_NET_QueryPtzTour

Options	Introduction
Description	Query cruise group configuration information
Function	int IRC_NET_QueryPtzTour(IRC_ NET_ HANDLE handle, int id, IRC_NET_PTZ_TOUR_INFO ptzTourInfo[], int inSize, int*outSize);
Parameter	Param [in] handle operation handle Param [in] id Cruise group id, range [1255], query all when the value is -1 Param ptzTourInfo cruise group configuration Param [in] inSize Cruise group input size Param [out] outSize Cruise group output size
Return Value	status code
Note	

10) Tour control IRC_NET_PtzTourControl

Options	Introduction
Description	Tour control
Function	int IRC_NET_PtzTourControl(IRC_NET_HANDLE handle, int ptzTourCmd, const IRC_NET_PTZ_TOUR_INFO* ptzTourInfo);
Parameter	Param [in] handle operation handle Param [in] ptzTourCmd tour control command, refer to IRC_NET_PTZ_TOUR_CMD_TYPE Param [in] ptzTourInfo tour information.
Return Value	status code
Note	

11) Query Pattern Configuration Quantity IRC_NET_QueryPtzPatternSize

Options	Introduction
Description	Query pattern configuration quantity
Function	int IRC_NET_QueryPtzPatternSize(IRC_NET_HANDLE handle, int* size);

Parameter	param[in] handle operation handle param[out] size query quantity
Return Value	status code
Note	

12) Query pattern configuration

IRC_NET_QueryPtzPattern

Options	Introduction
Description	Query pattern configuration
Function	int IRC_NET_QueryPtzPattern(IRC_NET_HANDLE handle, IRC_NET_PTZ_PATTERN_CONFIG* ptzPatternConfig);
Parameter	Param [in] handle operation handle Param [out] ptzPatternConfig patrol configuration
Return Value	status code
Note	

13) Patrol control IRC_NET_PtzPatternControl

Options	Introduction
Description	Patrol control

Function	int IRC_NET_PtzPatternControl(IRC_NET_HANDLE handle, const IRC_NET_PTZ_PATTERN_CONFIG* ptzPatternControl);
Parameter	Param [in] handle operation handle Param [in] ptzPatternControl Patrol control
Return Value	status code
Note	

14) PTZ restore default configuration

IRC_NET_ResetPtzConfig

Options	Introduction
Description	Cloud tilt restoration default configuration
Function	int IRC_NET_ResetPtzConfig(IRC_NET_HANDLE handle);
Parameter	Param [in] handle operation handle
Return Value	status code
Note	

15) PTZ precise positioning

IRC_NET_PtzPrecisePosition

Options	Introduction

Description	Pan tilt precise positioning
Function	int IRC_NET_PtzPrecisePosition(IRC_NET_HANDLE handle, const IRC_NET_PTZ_POSITION_PARAM* positionParam);
Parameter	Param [in] handle operation handle Param [in] positionConfigure precise positioning configuration
Return Value	status code
Note	

16)3D positioning IRC_NET_Ptz3DPosition

Options	Introduction
Description	3D positioning
Function	int IRC_NET_Ptz3DPosition(IRC_NET_HANDLE handle, const IRC_NET_PTZ_3D_POSITION_PARAM* positionParam);
Parameter	Param [in] handle operation handle Param [in] positionParam 3D positioning configuration
Return Value	status code

Note	

17) Pan/Tilt Control IRC_NET_SwivelControl

Options	Introduction
Description	Pan/Tilt Control
Function	int IRC_NET_SwivelControl(IRC_NET_HANDLE handle, int swivelCmd);
Parameter	param[in] handle operation handle param[in] swivelCmd Pan/Tilt control command, refer to IRC_NET_SWIVEL_CMD_TYPE
Return Value	status code
Note	

18) Region Focus IRC_NET_PtzRegionFocus

Options	Introduction
Description	Region focus
Function	int IRC_NET_PtzRegionFocus(IRC_NET_HANDLE handle, const IRC_NET_PTZ_REGION_FOCUS_PARAM* focusParam)
Parameter	param[in] handle operation handle

	param[in] focusParam region focus parameters
Return Value	status code
Note	

19) Manual Tracking IRC_NET_PtzManualTrack

Options	Introduction
Description	Manual tracking
Function	IRC_NET_PtzManualTrack(IRC_NET_HANDLE handle, const IRC_NET_PTZ_MANUAL_TRACK_PARAM* trackParam)
Parameter	param[in] handle operation handle param[in] trackParam manual tracking parameters
Return Value	status code
Note	

20) Lens Initialization IRC_NET_PtzLensInit

Options	Introduction
Description	Lens initialization
Function	IRC_NET_PtzLensInit(IRC_NET_HANDLE handle,

	int channel)
Parameter	param[in] handle operation handle param[in] channel channel No.
Return Value	status code
Note	

21) Get Gimbal Position IRC_NET_GetCurrentPtz

Options	Introduction
Description	Get Gimbal Position
Function	int IRC_NET_GetCurrentPtz(IRC_NET_HANDLE handle, IRC_NET_PTZ_POSITION_PARAM* positionParam)
Parameter	param[in] handle operation handle param[out] positionParam Gimbal position parameter
Return Value	status code
Note	

22) Query Area Scanning Information IRC_NET_QueryPtzRegionScanInfo

Options	Introduction
Description	Query area scanning information

Function	int IRC_NET_QueryPtzRegionScanInfo(IRC_NET_HANDLE handle, IRC_NET_REGION_SCAN_INFO regionScanInfos[], int inSize, int* outSize)
Parameter	param[in] handle operation handle param[out] regionScanInfos[] area scanning information param[in] inSize Area Scanning insize param[out] outSize Area Scanning outsize
Return Value	status code
Note	

23) Set Area Scanning Information

IRC_NET_SetPtzRegionScanInfo

Options	Introduction
Description	Set Area Scanning Information
Function	int IRC_NET_SetPtzRegionScanInfo(IRC_NET_HANDLE handle, const IRC_NET_REGION_SCAN_INFO* regionScanInfo)

Parameter	param[in] handle operation handle param[in] regionScanInfo area scanning information
Return Value	status code
Note	

24) Delete Area Scanning Information

IRC_NET_DeletePtzRegionScanInfo

Options	Introduction
Description	Delete Area Scanning Information
Function	int IRC_NET_DeletePtzRegionScanInfo(IRC_NET_HANDLE handle, int id)
Parameter	param[in] handle operation handle param[in] id Area Scanning id，refer to IRC_NET_REGION_SCAN_INFO，id≥1，id = -1: delete all
Return Value	status code
Note	

25) Area Scanning Control

IRC_NET_PtzRegionScanControl

Options	Introduction

Description	Area Scanning Control
Function	int IRC_NET_PtzRegionScanControl(IRC_NET_HANDLE handle, int id, bool state)
Parameter	param[in] handle operation handle param[in] id Area Scanning id，refer to IRC_NET_REGION_SCAN_INFO param[in] state Area scanning state，true-start， false-stop
Return Value	status code
Note	

26) Query Boot-up Actions

IRC_NET_QueryPtzBootActionInfo

Options	Introduction
Description	Query Boot-up Actions
Function	int IRC_NET_QueryPtzBootActionInfo(IRC_NET_HANDLE handle, IRC_NET_BOOT_ACTION_INFO* bootActionInfo)
Parameter	param[in] handle operation handle

	param[out] bootActionInfo Boot-up Actions
Return Value	status code
Note	

27) Set Boot-up Actions

IRC_NET_SetPtzBootActionInfo

Options	Introduction
Description	Set Boot-up Actions
Function	int IRC_NET_SetPtzBootActionInfo(IRC_NET_HANDLE handle, const IRC_NET_BOOT_ACTION_INFO* bootActionInfo)
Parameter	param[in] handle operation handle param[in] bootActionInfo Boot-up Actions
Return Value	status code
Note	

28) Query Idle Actions

IRC_NET_QueryPtzParkActionInfo

Options	Introduction
Description	Query Idle Actions
Function	int IRC_NET_QueryPtzParkActionInfo(

	IRC_NET_HANDLE handle, IRC_NET_PARK_ACTION_INFO* parkActionInfo)
Parameter	param[in] handle operation handle param[out] parkActionInfo Idle Actions
Return Value	status code
Note	

29) Set Idle Actions IRC_NET_SetPtzParkActionInfo

Options	Introduction
Description	Set Idle Actions
Function	int IRC_NET_SetPtzParkActionInfo(IRC_NET_HANDLE handle, const IRC_NET_PARK_ACTION_INFO* parkActionInfo)
Parameter	param[in] handle operation handle param[in] parkActionInfo Idle Actions
Return Value	status code
Note	

Chapter 4 Structure Introduction

1. IRC_NET_DEV_SEARCH_INFO

Structure Definition

typedef struct
{
char ip[IRC_NET_IP_LEN_MAX]; ///< Device IP
}

2. IRC_NET_LOGIN_INFO

Structure Definition

typedef struct
{
char ip[16]; ///< device IP
int port; ///< device port
char username[IRC_NET_NAME_LEN_MAX]; ///< user name
char password[IRC_NET_NAME_LEN_MAX]; ///< password
}

3. IRC_NET_DEV_INFO

Structure Definition

typedef struct
{
int channelNum; ///< number of channels
int optChannel; ///< visible light channel
int irChannel; ///< infrared channel
int productGeneration; ///<product generation
}

4. IRC_NET_PREVIEW_INFO

Structure Definition

typedef struct
{
int channel; ///< channel
int streamType; ///< stream type, refer to
IRC_NET_STREAM_TYPE
int frameFmt; ///< frame format，refer to
IRC_NET_FRAME_FMT
}

5. IRC_NET_POINT

Structure Definition

typedef struct
{
int x; ///< x-coordinate
int y; ///< y-coordinate
}

6. IRC_NET_RECT

Structure Definition

typedef struct
{
int top; ///< up
int left; ///< left
int right; ///< right
int bottom; ///< down
}

7. IRC_NET_ENV_PARAM

Structure Definition
typedef struct {

```
    float atmosphereTemp; ///< atmospheric temperature
    float distance; ///< target distance
    float emissivity; ///<emissivity    0.01-1
    float reflectedTemp; ///< reflected temperature
    float transmittance; ///< atmospheric transmissivity 0.01-1
}
```

8. IRC_NET_TEMP_ALARM_RULE_INFO

Structure Definition

typedef struct
{
int type; ///< type of alarm rule，refer to IRC_NET_TEMP_ALARM_RULE_TYPE
int debounce; ///< time of de-jitter，5s by defaule
float thresholdTemp; ///< temperature threshold
float toleranceTemp; ///< tolerance temperature
}

9. IRC_NET_TEMP_RULE_INFO

Structure Definition
typedef struct {

```
    bool enable; ///< enable switch
    int presetId; ///< preset Id，start from 0
    int id; ///< temperature rule ID，start from 1，invalid when adding
rules
    char name[IRC_NET_NAME_LEN_MAX]; ///< name of
temperature measurement rule
    int type; ///< type of temperature measurement rule，refer to
IRC_NET_TEMP_RULE_TYPE
    IRC_NET_POINT points[IRC_NET_POINT_MAX]; ///<
coordinates of temperature measurment rule
    int pointNum; ///<Number of coordinates in temperature
measurement rules
    bool envParamEnable; ///<enable switch of environmental
parameters
    IRC_NET_ENV_PARAM envParam; ///<environmental
parameters of the rule
    IRC_NET_TEMP_ALARM_RULE_INFO alarmRuleInfo;
///<alarm rule info
}
```

10.IRC_NET_TEMP_RULE_INFO_G1

Structure Definition

```
typedef struct

{

    int id; ///< temperature rule ID，start from 1，invalid when adding
rules

    int type; ///< type of temperature measurement rule，refer to
IRC_NET_TEMP_RULE_TYPE

    IRC_NET_POINT startPoint; ///< Start point coordinates

    IRC_NET_POINT endPoint; ///< End point coordinates

    int alarmType; ///< type of alarm rule, refer to
IRC_NET_TEMP_ALARM_RULE_TYPE_G1

    IRC_NET_TEMP_ALARM_RULE_INFO_G1
lowTempAlarmRuleInfo; ///< Low temperature alarm rule information

    IRC_NET_TEMP_ALARM_RULE_INFO_G1
highTempAlarmRuleInfo; ///< High temperature alarm rule information

    int debounce; ///< dejitter time, default to 5 seconds

    bool alarmLinkageSnapshotEnable; ///< Alarm-triggered snapshot
enable
```

```
}
```

11. IRC_NET_TEMP_RULE_INDEX

Structure Definition

typedef struct
{
int presetId; ///< preset Id，start from 0
int type; ///< type of temperature measurement rule，refer to IRC_NET_TEMP_RULE_TYPE
int id; ///< ID or temperature measurement rule，start from 1
}

12. IRC_NET_TEMP_INFO

Structure Definition

typedef struct
{
float avgTemp; ///< average temperature
float centerTemp; ///< center temperature
float maxTemp; ///< highest temperature
float minTemp; ///< lowest temperature
}

13.IRC_NET_RULE_TEMP_INFO

Structure Definition

typedef struct
{
IRC_NET_TEMP_RULE_INDEX ruleIndex;
IRC_NET_TEMP_INFO tempInfo;
}

14.IRC_NET_OSD_TIME_TITLE_INFO

Structure Definition

typedef struct
{
bool enable; ///< enable
IRC_NET_RECT rect; ///< title position，8192 coordinate system
}

15.IRC_NET_OSD_CHANNEL_TITLE_INFO

Structure Definition

typedef struct
{
bool enable; ///< enable
char name[IRC_NET_NAME_LEN_MAX]; ///< channel name，

UTF-8 string, maximum of 64 characters or Chinese characters.

IRC_NET_RECT rect; ///< title position，8192 coordinate system

}

16.IRC_NET_TEMP_SPAN_INFO

Structure Definition

typedef struct
{
bool enable; ///< enable
float lowTemp; ///< low tempeature threshold
float highTemp; ///< high temperature thershold
}

17.IRC_NET_ALARM_BASE_INFO

Structure Definition

typedef struct
{
int channel; ///< channel
int64_t timestamp; ///< time stamp
int alarmAction; ///< alarm action，refer to
IRC_NET_ALARM_ACTION
}

18.IRC_NET_ALARM_TEMP_INFO

Structure Definition

typedef struct
{
IRC_NET_ALARM_BASE_INFO alarmBaseInfo; ///< basic alram information
IRC_NET_RULE_TEMP_INFO ruleTempInfo; ///< rule temperature information
int tempUnit; ///< temperature unit，refer to IRC_NET_TEMP_UNIT
int alarmRuleType; ///< type of alarm rule，refer to IRC_NET_TEMP_ALARM_RULE_TYPE
float thresholdTemp; ///< threshold temperature
}

19.IRC_NET_DEV_ABILITY_QUERY_CONDITION

Structure Definition

typedef struct
{
int channel; ///< thoroughfare
int type; ///< equipment capability type, refer to IRC_NET_DEV_ABILITY_TYPE

}

20.IRC_NET_PTZ_ABILITY

Structure Definition
Pan tilt detailed capability Typedef struct { Int Zoom///< zoom Int focus///< focusing Int iris///< aperture Int ptz///< gimbal Int wiper///< wiper blade Int light///< fill light Int defrost///< defrosting Int defog///< translucent fog Int fan///< fan Int heater///< heater Int automatic///< auto focus Int synchronousView///< bidirectional follow-up Int ptzPosition///< accurate positioning Int threeDPosition///< 3D positioning

}

21.IRC_NET_PTZ_CONTROL

Structure Definition

Pan tilt direction control
Typedef struct
{
Int channel///< passageway
Int type///< pan tilt control function type, refer to IRC-NET-PTZ-CMD-TYPE
Int param1///< parameter 1, please refer to the document for details on gimbal command parameters
Int param2///< parameter 2, please refer to the document for the PTZ command parameters
Int param3///< parameter 3, please refer to the document for the PTZ command parameters
Int stop///< whether to stop, 0-start, 1-stop
}

22.IRC_NET_PTZ_AUX_FUNC_STATE

Structure Definition
Enabling status of pan tilt assist function

```
Typedef struct
{
    Int wiperState///< wiper status
    Int lightState///< fill light status
    Int deprostState///< defrosting status
    Int defogState///< foggy state
    Int fanState///< fan status
    Int heaterState///< heater status
    Int automaticState///< auto focus state
    Int synchronousViewState///< bidirectional follow-up state
}
```

23.IRC_NET_PTZ_PRESET_INFO

Structure Definition

```
Pre set point information
Typedef struct
{
    Bool enable;
    Int id///< preset point ID, starting from 0
    Char name [IRC-NET-NAME-LEN-MAX]///< name of preset
point
}
```

24.IRC_NET_PTZ_TOUR_INFO

Structure Definition

Cruise group configuration information
Typedef struct
{
Bool enable;
Int id///< cruise group ID, starting from 1
Char name [IRC-NET-NAME-LEN-MAX]///< cruise group point name
Bool running///< running state
IRC-NET-PTZ-TOUR-PRESET-INFO presetInfos [IRC-NET-TOUR-PRESET-NUM-MAX]///< cruise group preset point information
Int presetNum///< number of preset cruise control points
}

25.IRC_NET_PTZ_TOUR_PRESET_INFO

Structure Definition
Cruise group preset point information Typedef struct { IRC-NET-PTZ-PRESET-INFO presetInfo///< cruise group preset

point information

Int residenceTime///< residence time

}

26.IRC_NET_PTZ_PATTERN_CONFIG

Structure Definition

Patrol configuration
Typedef struct
{
IRC-NET-PTZ-PATTERN_INFO patternInfo
[IRC-NET-PATTERN_NUM-MAX]///< patrol information
}

27.IRC_NET_PTZ_PATTERN_INFO

Structure Definition

Patrol information
Typedef struct
{
Bool enable///< enable
Int id///< patrol ID, range [1, 5]
Bool running///< running state
}

28.IRC_NET_PTZ_PATTERN_CONTROL

Structure Definition

Patrol control
Typedef struct
{
Int type///< patrol control function type, refer to
IRC-NET-PTZ-PATTERN_CMD-TYPE
Int id///< patrol ID, range [1, 5]
}

29.IRC_NET_PTZ_POSITION_PARAM

Structure Definition

Pan tilt precise positioning configuration
Typedef struct
{
Float pan///< horizontal angle
Float tilt///< vertical angle
Float Zoom///< doubling
}

30.IRC_NET_PTZ_3D_POSITION_PARAM

Structure Definition

3D positioning configuration

Typedef struct

{

Int channel///< passageway

IRC-NET-POINT startPoint///< starting point

IRC-NET-POINT endPoint///< end point

}

31.IRC_NET_FRAME_TEMP_ALARM_CONFIG

Structure Definition

Typedef struct
{
Bool enable///< enable switch
IRC-NET-TEMP-ALARM-RULE-INFO alarmRuleInfo///< alarm rule information
IRC-NET-TEMP-ALARM-LINKAGE alarmLinkage///< alarm linkage
}

32.IRC_NET_FRAME_TEMP_ALARM_CONFIG_G1

Structure Definition
typedef struct

{

int alarmType; ///< alarm rule type, refer to IRC_NET_TEMP_ALARM_RULE_TYPE_G1

IRC_NET_TEMP_ALARM_RULE_INFO_G1 lowTempAlarmRuleInfo; ///< Low temperature alarm rule information

IRC_NET_TEMP_ALARM_RULE_INFO_G1 highTempAlarmRuleInfo; ///< High temperature alarm rule information

int debounce; ///< time of de-jitter，5s by defaule

bool alarmLinkageSnapshotEnable; ///< Alarm-triggered snapshot enable

}

33.IRC_NET_TEMP_ALARM_RULE_INFO

Structure Definition
Temperature measurement alarm rules Typedef struct { Int type///< alarm rule type, refer to IRC-NET-TEMP-ALARM-RULE-TYPE Int debounce///< dejitter time, default to 5 seconds Float thresholdTemps///< temperature threshold Float tolerance Temps///< tolerance temperature

}

34.IRC_NET_TEMP_ALARM_RULE_INFO_G1

Structure Definition

Temperature measurement alarm rules
typedef struct
{
float thresholdTemp; ///< temperature threshold
bool enable; ///< Level enable switch
float tempLevel1; ///< Level 1
float tempLevel2; ///< Level 2
float tempLevel3; ///< Level 3
}

35.IRC_NET_TEMP_ALARM_LINKAGE

Structure Definition
Temperature measurement alarm linkage Typedef struct { IRC-NET-TEMP-LINKAGE-CHANNEL snapLinkageChannel///< snap linkage channel IRC-NET-TEMP-LINKAGE-CHANNEL

recordLinkageChannel///< video linkage channel

}

36.IRC_NET_TEMP_LINKAGE_CHANNEL

Structure Definition

Temperature measurement alarm linkage channel
Typedef struct
{
Bool enable///< enable switch
Bool channel///< linkage channel
Int64_t delay///< linkage delay
}

37.IRC_NET_TEMP_MASK_INDEX

Structure Definition

Index of temperature measurement shielding area
Typedef struct
{
Int presetId///< preset point ID, starting from 0
Int id///< block area ID, starting from 1
}

38.IRC_NET_TEMP_MASK_INFO

Structure Definition

Temperature measurement shielding area information
Typedef struct
{
Bool enable///< enable switch
IRC-NET-TEMP-MASK-INDEX index///< block area index
Char name [IRC-NET-NAME-LEN-MAX]///< block area name
IRC NET POINT points [IRC NET MASK POINT NUM MAX]///< shielded area coordinate points
}

39.IRC_NET_FILE_QUERY_PARAM

Structure Definition
SD card query criteria Typedef struct { Int channel///< passageway Int type///< file type, refer to IRC-NET-SD-FILE-TYPE Char startTime [IRC-NET-TIME-LEN-MAX]///< start time Char endTime [IRC-NET-TIME-LEN-MAX]///< end time Int count///< expected number of returns, default to 50

```
    Int offset///< query position offset, fill in 0 for the first time
}
```

40.IRC_NET_FILE_INFO

Structure Definition

SD card file information
Typedef struct
{
Int id///< ID number
Int channel///< passageway
Char startTime [IRC-NET-TIME-LEN-MAX]///< start time
Char endTime [IRC-NET-TIME-LEN-MAX]///< end time
Char path [IRC-NET-FILE-PATH-LEN-MAX]///< file path
}

41.IRC_NET_FILE_DOWNLOAD_INFO

Structure Definition
SD card file download information Typedef struct { Int type///< download file type, refer to IRC-NET-SD-FILE-TYPE Int channel///< passageway

```
    Char startTime [IRC-NET-TIME-LEN-MAX]///< start time
    Char endTime [IRC-NET-TIME-LEN-MAX]///< end time
    Char filePath [IRC-NET-FILE-PATH-LEN-MAX]///< file path
    Char downloadPath [IRC-NET-FILE-PATH-LEN-MAX]///<
download path
}
```

42.IRC_NET_FILE_DOWNLOAD_PROGRESS

Structure Definition

SD card file download progress
Typedef struct
{
Int64_t totalSize///< total download length, in bytes
Int64_t downloadSize///< downloaded length, in bytes
}

43.IRC_NET_TEMP_EXT_INFO_CB

Structure Definition

Extended information for temperature callback
typedef struct
{
uint64_t utcTime; ///< UTC millisecond timestamp

```
}
```

44.IRC_NET_TEMP_INFO_CB

Structure Definition

Temperature information in temperature callback
typedef struct
{
char* temp; ///< frame data
int width; ///< width
int height; ///< height
}

45.IRC_NET_VIDEO_INFO_CB

Structure Definition

Video callback
typedef struct
{
char* frame; ///< frame data
int width; ///< width
int height; ///< height
int validWidth; ///< active width
int validHeight; ///< active height

```
}
```

46.IRC_NET_IVS_INFO_CB

Structure Definition

IVS info in video callback
typedef struct
{
int baseIvsInfoLen; ///< length of basic IVS info
char* baseIvsInfo; ///< basic IVS info
int tempIvsInfoLen; ///<length of temperature IVS info
char* tempIvsInfo; ///< temperature IVS info
}

47.IRC_NET_IP_CONFIG

Structure Definition

IP configuration
typedef struct
{
char name[IRC_NET_NAME_LEN_MAX]; ///< Network card name, read-only
bool dhcpEnable; ///< dhcp enable
char mac[IRC_NET_MAC_LEN_MAX]; ///<MAC address,

```
read-only
        char ip[IRC_NET_IP_LEN_MAX]; ///< ip address
        char subnetMask[IRC_NET_IP_LEN_MAX]; ///< Subnet mask
        char gateway[IRC_NET_IP_LEN_MAX]; ///< default gateway
        char defaultDns[IRC_NET_IP_LEN_MAX]; ///< primary DNS
        char standbyDns[IRC_NET_IP_LEN_MAX]; ///< secondary DNS
}
```

48.IRC_NET_SWIVEL_CMD_TYPE

Structure Definition

Basic control function types for the pan-tilt unit
typedef enum
{
IRC_NET_SWIVEL_CMD_UP = 0, ///< Tilt up
IRC_NET_SWIVEL_CMD_DOWN ///< Tilt down
}

49.IRC_NET_IP_TARGET_RECOGNITION_CONFIG

Structure Definition
Channel target recognition configuration typedef struct {

```
    bool enable; ///< enable
    int sensitivity; ///< sensitivity, range: 0-100，70 by default
    IRC_NET_LINKAGE_SET linkageSet; ///< linkage action
}
```

50.IRC_NET_PTZ_REGION_FOCUS_PARAM

Structure Definition

region focus parameters
typedef struct
{
int channel; ///< channel
IRC_NET_POINT startPoint; ///< Start point coordinates
IRC_NET_POINT endPoint; ///< End point coordinates
int stop; ///< whether to stop，0-start，1-stop
}

51.IRC_NET_PTZ_MANUAL_TRACK_PARAM

Structure Definition

Manual track parameters
typedef struct
{
int channel; ///< channel

```
    IRC_NET_POINT startPoint; ///< Start point coordinates
    IRC_NET_POINT endPoint; ///< End point coordinates
    int stop; ///< whether to stop，0-start，1-stop
}
```

52.IRC_NET_REGION_SCAN_INFO

Structure Definition

area scanning information
typedef struct
{
int id; ///< area scanning ID
bool enable; ///< area scanning enable
int derection; ///< Scan direction，1-clockwise，-1-Anticlocksize
int speed; ///< speed
int startPresetId; ///< start preset ID
int stopPresetId; ///< end presed ID
float tiltStepAngle; ///< gradient value
}

53.IRC_NET_BOOT_ACTION_INFO

Structure Definition
Boot-up Actions

```
typedef struct
{
    bool enable; ///< boot-up actions enable
    int actionType; ///< boot-up action type，refer to IRC_NET_ACTION_TYPE
    int lineScanId; ///< Line sacn id
    int regionScanId; ///< Area scan id
    int presetId; ///< Preset id
    int patternId; ///< Pattern id
    int tourId; ///< Tour id
}
```

54.Idle Actions IRC_NET_PARK_ACTION_INFO

Structure Definition

```
typedef struct
{
    bool enable; ///< idle actions enable
    int actionType; ///< idle action type, refer to IRC_NET_ACTION_TYPE  0: None
    int lineScanId; ///< Line sacn id
    int regionScanId; ///< Area scan id
    int presetId; ///< Preset id
```

```
    int patternId; ///< Pattern id
    int tourId; ///< Tour id
    int runningFunction; ///< refer to IRC_NET_ACTION_TYPE, 0:
None
    int second; ///< Idle time
    bool running; ///<  运行状态
}
```

55. Laser Distance OSD parameters

IRC_NET_LASER_DISTANCE_OSD_PARAM

Structure Definition

typedef struct
{
bool enable; ///< enable
int rangingDuration; ///< duration of a single ranging
IRC_NET_LASER_DISTANCE_OSD_TITLE_FORMAT
titleFormat; ///< laser ranging OSD title format
}

56. Title Format For Laser Distance OSD

IRC_NET_LASER_DISTANCE_OSD_TITLE_FORMAT

Structure Definition

typedef struct
{
int alignType; ///< Alignment: 0 Left-aligned，1 Right-aligned
int fontSize; ///< Font size: 0 Small，1 medium，2 large
int autoTurn; ///< Invert color treatment: 0 no treatment, 1 automatic invert color, 2 hook edge
int bgColor[IRC_NET_COLOR_TYPE_MAX]; ///< Background color
int fgColor[IRC_NET_COLOR_TYPE_MAX]; ///< Foreground color
IRC_NET_RECT titlePosition; ///< Title position
}

57. Fill Light Configuration

IRC_NET_FILL_LIGHT_CONFIG_INFO

Structure Definition

typedef struct
{
int fillLightMode; ///< Filllight mode 0 Auto，1 Manual
int infraredLight; ///< Infrared Light Control 0-100
int whiteLight; ///< White Light Control 0-100

```
    int hFov; ///< Horizontal Field of View of Fill Light 0-100
    float hFovFactor; ///< Angle Factor of the horizontal field of view of
fill light
}
```

Chapter 5 Constant

1. status code list IRC_NET_ERROR

Definition Description
typedef enum { IRC_NET_ERROR_OK = 0, ///< succeed IRC_NET_ERROR_FAILED = 1, ///< fail IRC_NET_ERROR_NOT_SUPPORTED = 2, ///< unavailable IRC_NET_ERROR_PARAM_WRONG = 3, ///< parameter error IRC_NET_ERROR_TEMP_CALLBACK_WRONG = 4, ///<temperature callback disabled IRC_NET_ERROR_BLACK_LIST = 1001, ///< user is not on the whitelist IRC_NET_ERROR_NONE_USER = 1002, ///< username does not exist IRC_NET_ERROR_PWD_WRONG = 1003, ///< password error IRC_NET_ERROR_DEV_NOT_SUPPORTED = 1004, ///< capability set has no device model IRC_NET_ERROR_ACCOUNT_LOCK = 1005, ///< account locked

```
    IRC_NET_ERROR_USER_LIMIT = 1006, ///< user count exceeds the limit
    IRC_NET_ERROR_SYSTEM_EXCEPTION = 1007, ///< operation failed
    IRC_NET_ERROR_TEMP_RULE_LIMIT = 1101, ///< temperature measurement rule limit
} IRC_NET_ERROR;
```

2. Type of Global Exception

IRC_NET_EXCEPTION_TYPE

Definition Description
typedef enum { IRC_NET_EXCEPTION_PREVIEW_OFFLINE = 1001, ///< preview offline IRC_NET_EXCEPTION_ALARM_OFFLINE = 1002, ///< alarm offline IRC NET EXCEPTION_DEV_OFFLINE = 1003 ///<device offline } IRC_NET_EXCEPTION_TYPE;

3. Alarm Type IRC_NET_ALARM_TYPE

Definition Description
typedef enum { IRC_NET_ALARM_TEMP = 10001, ///< temperature IRC_NET_ALARM_FIRE = 10002, ///< fire IRC_NET_ALARM_TEMP_RISE = 10003, ///< temperature rise IRC_NET_ALARM_TEMP_DIFF = 10004, ///< temperature difference IRC_NET_ALARM_FIRE_PULSE = 10005, ///< fire pulse IRC_NET_ALARM_REGION_INTRUSION = 20001, ///< area intrusion IRC_NET_ALARM_LINE_INTRUSION = 20002, ///<tripwire intrusion IRC_NET_ALARM_SMOKE_DETECT = 30001, ///<smog IRC_NET_ALARM_LOCAL = 40001 ///< locol } IRC_NET_ALARM_TYPE;

4. Frame Forma IRC_NET_FRAME_FMT

Definition Description
typedef enum {

```
    IRC_NET_FRAME_FMT_YUV420P = 0, ///< YUV420P
    IRC_NET_FRAME_FMT_RGB24, ///< RGB24
    IRC_NET_FRAME_FMT_RGBA, ///< RGBA
    IRC_NET_FRAME_FMT_BGRA ///< BGRA
} IRC_NET_FRAME_FMT;
```

5. Stream Type IRC_NET_STREAM_TYPE

Definition Description
typedef enum { IRC_NET_STREAM_MAIN = 0, ///< main stream IRC_NET_STREAM_SUB ///< sub stream } IRC_NET_STREAM_TYPE;

6. Equipment capability type IRC_NET_DEV_ABILITY_TYPE

Definition Description

typedef enum
{
IRC_NET_DEV_ABILITY_PTZ = 0, ///< pan tilt capability, please refer to IRC_NET_PTZ_ABILITY
}

7. Log level IRC_NET_LOG_LEVEL

Definition Description

typedef enum
{
IRC_NET_LOG_LEVEL_TRACE = 0,
IRC_NET_LOG_LEVEL_DEBUG,
IRC_NET_LOG_LEVEL_INFO,
IRC_NET_LOG_LEVEL_WARN,
IRC_NET_LOG_LEVEL_ERROR
}

8. Temperature measurement alarm rule type IRC_NET_TEMP_ALARM_RULE_TYPE

Definition Description
typedef enum { IRC_NET_TEMP_ALARM_RULE_NONE=0,///<no rule IRC_NET_TEMP_ALARM_RULE_AVG_TEMP_GT,///<the average temperature is greater than IRC_NET_TEMP_ALARM_RULE_AVG_TEMP_LT,///<the average temperature is less than IRC_NET_TEMP_ALARM_RULE_HIGHT_TEMP_GT,///<high

temperature greater than

IRC_NET_TEMP_ALARM_RULE_HIGHT_TEMP_LT,///<high temperature less than

IRC_NET_TEMP_ALARM_RULE_LOW_TEMP_GT,///<low temperature greater than

IRC_NET_TEMP_ALARM_RULE_LOW_TEMP_LT//<low temperature less than

}

9. Temperature measurement alarm rule type_G1

IRC_NET_TEMP_ALARM_RULE_TYPE_G1

Definition Description

typedef enum
{
IRC_NET_TEMP_ALARM_RULE_G1_NONE = 0, ///< no rules
IRC_NET_TEMP_ALARM_RULE_G1_HIGH_TEMP, ///< high temp
IRC_NET_TEMP_ALARM_RULE_G1_LOW_TEMP, ///< low temp
IRC_NET_TEMP_ALARM_RULE_G1_HIGH_LOW_TEMP ///< high temp & low temp
}

10. Basic control function types of pan tilt

IRC_NET_PTZ_CMD_TYPE

Definition Description
Typedef enum { IRC_NET_PTZ_CMDUP_UP,///<upper IRC_NET_PTZ_CMD_DOWN,///<below IRC_NET_PTZ_CMD_LEFT,///<left IRC_NET_PTZ_CMD_RIGHT,///<right IRC_NET_PTZ_CMD_LEFT_TOP,///<top Left IRC_NET_PTZ_CMD_RIGHT_TOP,///<top Right IRC_NET_PTZ_CMD_LIFETDOWN,///<bottom left IRC_NET_PTZ_CMD_RIGHT_DOWN,///<bottom right IRC_NET_PTZ_CMD_ZOOM_OUT,///<shortened focal length IRC_NET_PTZ_CMD_ZOOM_IN,///<lengthened focal length IRC_NET_PTZ_CMD_FOCUS_NEAR,///<focus closer IRC_NET_PTZ_CMD_FOCUS_FAR,///<focus becomes farther away IRC_NET_PTZ_CMD_IRIS_CLOSE,///<aperture reduction IRC_NET_PTZ_CMD_IRIS_OPEN//<aperture increases IRC_NET_PTZ_CMD_WIPER=1,///<wipers

```
    IRC_NET_PTZ_CMD_LIGHT,///<fill light
    IRC_NET_PTZ_CMD_DEFROST,///<defrost
    IRC_NET_PTZ_CMD_DEFOG,///<clear fog
    IRC_NET_PTZ_CMD_FAN,///<fan
    IRC_NET_PTZ_CMD_HEATER,///<heater
    IRC_NET_PTZ_CMD_AUTOMATIC,///<auto focus
    IRC_NET_PTZ_CMD_SYNCHRONOUS_VIEW,///<bidirectiona
l follow_up
}
```

11. Type of preset point control function

IRC_NET_PTZ_PRESET_CMD_TYPE

Definition Description
typedef enum { IRC_NET_PTZ_PRESET_CMD_ADD=0,///<add preset point IRC_NET_PTZ_PRESET_CMD_UPDATE_NAME,///<update preset point names IRC_NET_PTZ_PRESET_CMD_GOTO,///<move to preset point IRC_NET_PTZ_PRESET_CMD_DELETE,///<delete a single preset point IRC_NET_PTZ_PRESET_CMD_DELETE_ALL,///<delete all

preset points }

12. Cruise control function type

IRC_NET_PTZ_TOUR_CMD_TYPE

Definition Description

typedef enum
{
IRC_NET_PTZ_TOUR_CMD_SAVE=0,///<save Cruise Group
IRC_NET_PTZ_TOUR_CMD_START,///<start cruising
IRC_NET_PTZ_TOUR_CMD_STOP,///<stop Cruise
IRC_NET_PTZ_TOUR_CMD_DELETE,///<delete a single cruise group
IRC_NET_PTZ_TOUR_CMD_DELETE_ALL//<delete all cruise control groups
}

13. Type of patrol control function

IRC_NET_PTZ_PATTERN_CMD_TYPE

Definition Description
typedef enum {

```
    IRC_NET_PTZ_PATTERN_CMD_START_RECOED=0,///<start
recording
    IRC_NET_PTZ_PATTERN_CMD_STOP_RECOED,///<end
Record
    IRC_NET_PTZ_PATTERN_CMD_START_REPLAY,///<start
replay
    IRC_NET_PTZ_PATTERN_CMD_STOP_REPLAY,///<end
replay
    IRC_NET_PTZ_PATTERN_CMD_ELETE_ALL//<delete      all
patrols
}
```

14.SD card file type IRC_NET_SD_FILE_TYPE

Definition Description
typedef enum { IRC_NET_SD0SNAP_ALL=0,///<capture all images IRC.NET SD SNAP AlaRM,///<alarm capture image IRC_NET_SD0SNAP_COMMON,///<normal captured images IRC.NET SD VIDEO_ALL,///<all recordings IRC.NET SD VIDEO_ALARM,///<alarm recording IRC.NET SD_VIDEO_COMMON//<regular Recording

}

15. Temperature measurement rule type IRC_NET_TEMP_RULE_TYPE

Definition Description

Temperature measurement rule type
typedef struct
{
IRC_NET_TEMP_RULE_POINT = 0, ///< point
IRC_NET_TEMP_RULE_LINE, ///< line
IRC_NET_TEMP_RULE_RECT, ///< rectangle
IRC_NET_TEMP_RULE_CIRCLE, ///< circle
IRC_NET_TEMP_RULE_POLYGON ///< polygon
}

16. Alarm action type IRC_NET_ALARM_ACTION

Definition Description
Alarm action type typedef struct { IRC_NET_ALARM_ACTION_SINGLE = 0, ///< single pulse alarm IRC_NET_ALARM_ACTION_START, ///< alarm start

```
    IRC_NET_ALARM_ACTION_END ///< alarm end
}
```

17. Temperature unit IRC_NET_TEMP_UNIT

Definition Description

Temperature unit
typedef struct
{
IRC_NET_TEMP_CENTIGRADE = 0, ///< Celsius
IRC_NET_TEMP_FAHRENHEIT, ///< Fahrenheit
IRC_NET_TEMP_KELVIN ///< Kelvin
}

18. Level temperature measurement range IRC_NET_TEMP_LEVEL_TYPE

Definition Description
level temperature measurement range typedef struct { IRC_NET_TEMP_LEVEL_HG = 0, ///< High gain IRC_NET_TEMP_LEVEL_LG, ///< Low gain IRC_NET_TEMP_LEVEL_AUTO ///< Auto gain

}

19. Color Palette type IRC_NET_PALETTE_TYPE

Definition Description
Color Palette type typedef struct { IRC_NET_PALETTE_WHITE_HOT = 0, ///< WhiteHot IRC_NET_PALETTE_BLACK_HOT, ///< BlackHot IRC_NET_PALETTE_RAINBOW, ///< Rainbow IRC_NET_PALETTE_RAINBOW_HC, ///< RainbowHC IRC_NET_PALETTE_IRON, ///< Iron IRC_NET_PALETTE_LAVA, ///< Lava IRC_NET_PALETTE_SKY, ///< Sky IRC_NET_PALETTE_MID_GREY, ///< MidGrey IRC_NET_PALETTE_RDGY, ///< RdGy IRC_NET_PALETTE_PUOR, ///< PuOr IRC_NET_PALETTE_SPECIAL, ///< Special IRC_NET_PALETTE_RED, ///< Red IRC_NET_PALETTE_ICE_FIRE, ///< IceFire IRC_NET_PALETTE_GREE_RED, ///< GreenRed IRC_NET_PALETTE_SPECIAL2, ///< Special2

```
    IRC_NET_PALETTE_RED_HOT, ///< RedHot
    IRC_NET_PALETTE_GREEN_HOT, ///< GreenHot
    IRC_NET_PALETTE_BLUE_HOT, ///< BlueHot
    IRC_NET_PALETTE_GREEN, ///< Green
    IRC_NET_PALETTE_BLUE, ///Blue
}
```

20. Action Type IRC_NET_ACTION_TYPE

Definition Description

Action Type
typedef enum
{
IRC_NET_ACTION_AUTO_RESET = 0, ///< Auto Homing
IRC_NET_ACTION_PRESET, ///< Presets
IRC_NET_ACTION_TOUR, ///< Tour
IRC_NET_ACTION_PATTERN, ///< Pattern
IRC_NET_ACTION_LINE_SCAN, ///< Line scan
IRC_NET_ACTION_AREA_SCAN, ///< Area scan
}

Chapter 6 Demo Source Code & Operation Guide

1. Demo Source Code

1) Compiling Environment

Windows：win10, VS2019 + Qt5.15.2

Linux：ubuntu18.04, Qt5.15.2

2) QT Configuration Instructions

Reference: Windows系统安装Qt 5.15.2完全版_qt5.15.2-CSDN博客

3) Windows C++ Basic Runtime Library Description

The Microsoft runtime libraries are used during the Windows SDK process. Download path:

4) Folder Content Description

	Source Files Location	Library Files Location	Header Files Location
Windows/Linux	../Demo/C++/src	.. /SDK/x64 .. /SDK/x86	../SDK/include

5) SDK Update Description

To update the SDK, you only need to update the infrared libraries and header files.

Windows:

Infrared libraries are IRCNetSDK.dll, IRCNetSDK.lib; other libraries are the dependencies used by the infrared library.

Header files are IRCNetSDK.h, IRCNetSDKDef.h.

Linux:

Infrared libraries are LibIRCNetSDK.so, LibIRCNetSDK.so.1, LibIRCNetSDK.so.1.0, LibIRCNetSDK.so.1.0.0; header files are IRCNetSDK.h, IRCNetSDKDef.h.


2. Demo Operation

1) Login username and password are the same as the device's web login credentials; after logging in to the device, further operations can be performed.

2) For devices that support both visual and infrared dual-channel images,

You can switch the channel number to change the display and configure the corresponding channel.

3) The demo is divided into five modules: Preview, Playback, Temp Alarm, Configuration , and PTZ Control.

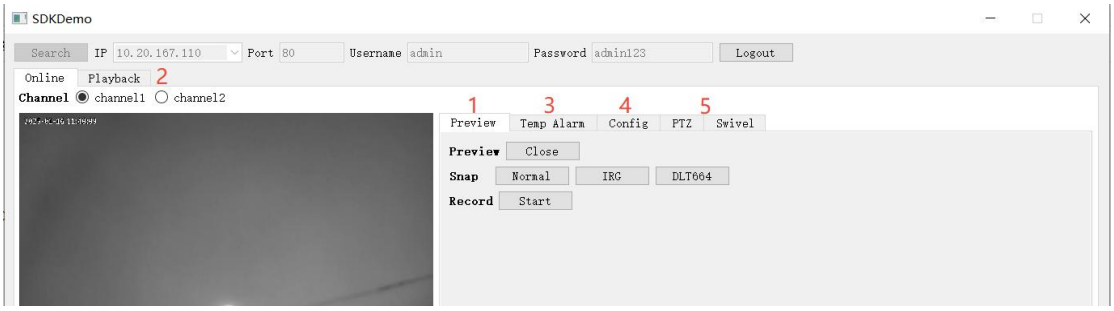

1：Preview corresponds to the demonstration of some interfaces in the "Real-time Preview & Snapshot Recording" section of this manual, such as preview and snapshot interfaces.

2： Playback corresponds to the SD card-related interfaces in the "Device Configuration" section of this manual.

3： Temp Alarm corresponds to the demonstration of some interfaces in the "Temperature Measurement Configuration & Temperature Data Acquisition" section of this manual, such as full-frame temperature acquisition and full-frame/region high and low-temperature acquisition interfaces.

4： Config corresponds to the demonstration of some interfaces in the "Device Configuration" section of this manual, such as OSD settings and IP settings interfaces.

5： PTZ Control is for devices that support PTZ control and corresponds to the demonstration of some PTZ-related interfaces in the "Device Configuration" section of this manual, such as PTZ rotation and preset interfaces.

Appendix

Table 1: PTZ Commands

Note: speed range:1-8; Blank table parameters do not need to be filled in.

CMD	param 1	param 2	param 3
IRC_NET_PTZ_CMD_WIPER			
IRC_NET_PTZ_CMD_LIGHT			
IRC_NET_PTZ_CMD_DEFROST			
IRC_NET_PTZ_CMD_DEFOG			
IRC_NET_PTZ_CMD_FAN			
IRC_NET_PTZ_CMD_HEATER			
IRC_NET_PTZ_CMD_AUTOMATIC			
IRC_NET_PTZ_CMD_SYNCHRONOUS_VIEW			
IRC_NET_PTZ_CMD_UP	speed		
IRC_NET_PTZ_CMD_DOWN	speed		
IRC_NET_PTZ_CMD_LEFT	speed		
IRC_NET_PTZ_CMD_RIGHT	speed		
IRC_NET_PTZ_CMD_LEFT_TOP	speed		
IRC_NET_PTZ_CMD_RIGHT_TOP	speed		
IRC_NET_PTZ_CMD_LEFT_DOWN	speed		
IRC_NET_PTZ_CMD_RIGHT_DOWN	speed		
IRC_NET_PTZ_CMD_ZOOM_OUT			
IRC_NET_PTZ_CMD_ZOOM_IN			
IRC_NET_PTZ_CMD_FOCUS_NEAR			
IRC_NET_PTZ_CMD_FOCUS_FAR			
IRC_NET_PTZ_CMD_IRIS_CLOSE			
IRC_NET_PTZ_CMD_IRIS_OPEN			