APN Parameter Setting Manual for fourfath

origin

Since some operators 'sim cards need to set APN parameters before the 4G module can connect to the network normally, in the following documents, you will learn how to connect to the hidden WIFI of the charging station, how to log in to the router backend of the charging station, how to set APN and save, how to confirm the network connection, before doing these things, please make sure that the SIM has been replaced and installed correctly.

Some parameters that must be understood

- Charging pile WIFI is **2.4G** frequency
- The WIFI name of the charging pile can be found on the reverse
- The password for the charging pile WIFI is **Raedian001**
- The background address of the router is **192.168.3.1**
- The username of the router is **admin**
- The password of the router is **Raedian001**

Operation sequence

- The charging pile is powered on
- Find the WIFI name in the case of the charging pile
- Use your mobile phone or computer to connect to the WIFI of the charging station
- Enter router background
- Set APN parameters
- Confirm networking status

The charging pile is powered on

After the charging pile is powered on, a message is displayed indicating that the network connection fails



Find the WIFI name in the case of the charging pile

A label like this can be found on the shell

Connect to hidden 2.4GWIFI

- Turn on your device's WIFI Settings



- Enter the WIFI name found on the shell




- Enter WIFI password **Raedian001**




- Wait for connection success

Enter router background

- Open a browser
- Enter 192.168.3.1 in the address bar

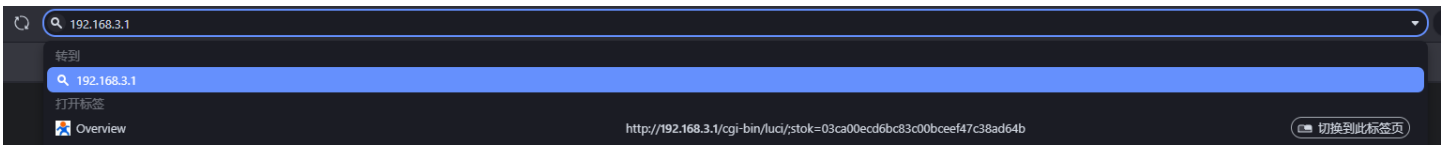

- Wait for the System Information of the router background

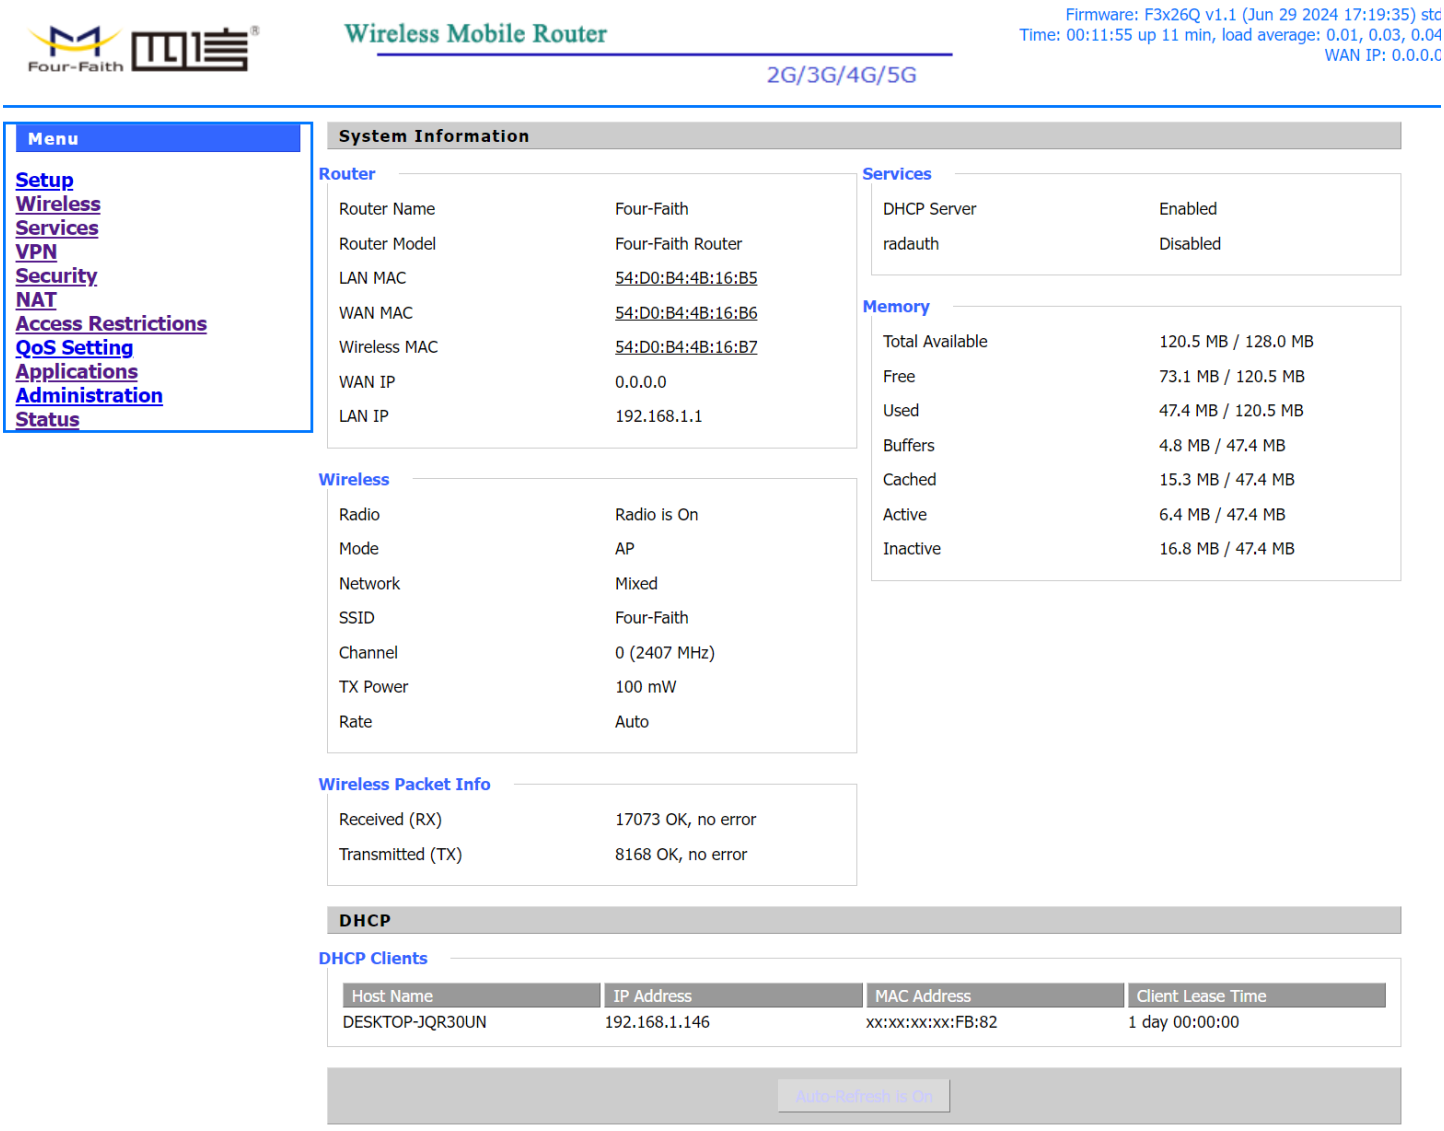


- Click the Settings button to jump to the login dialog box




- Enter username **admin** and password **Raedian001**
- Wait for login success

Set APN parameters

- Find the Basic Setup

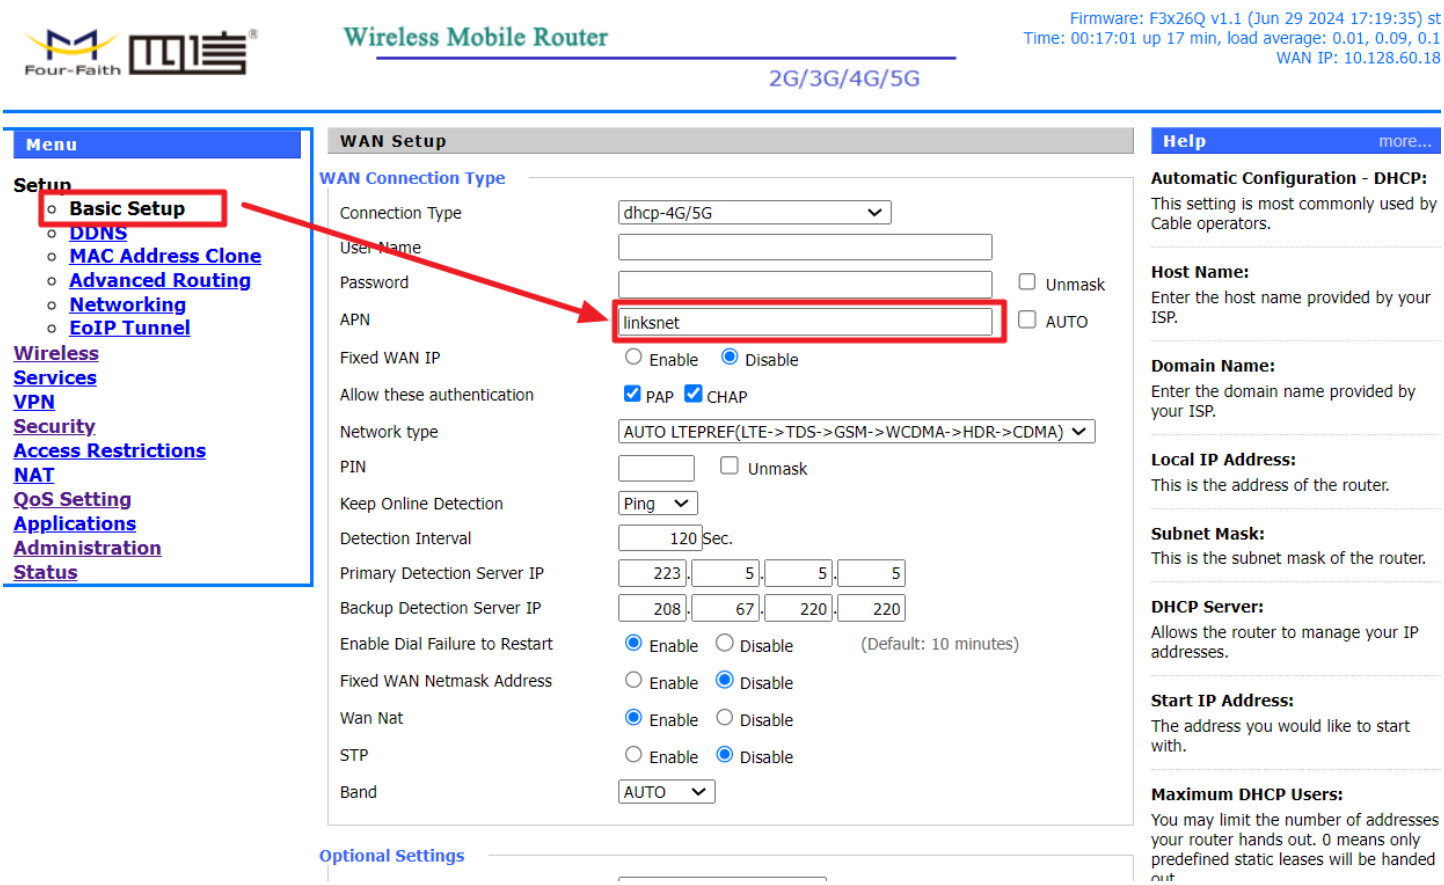


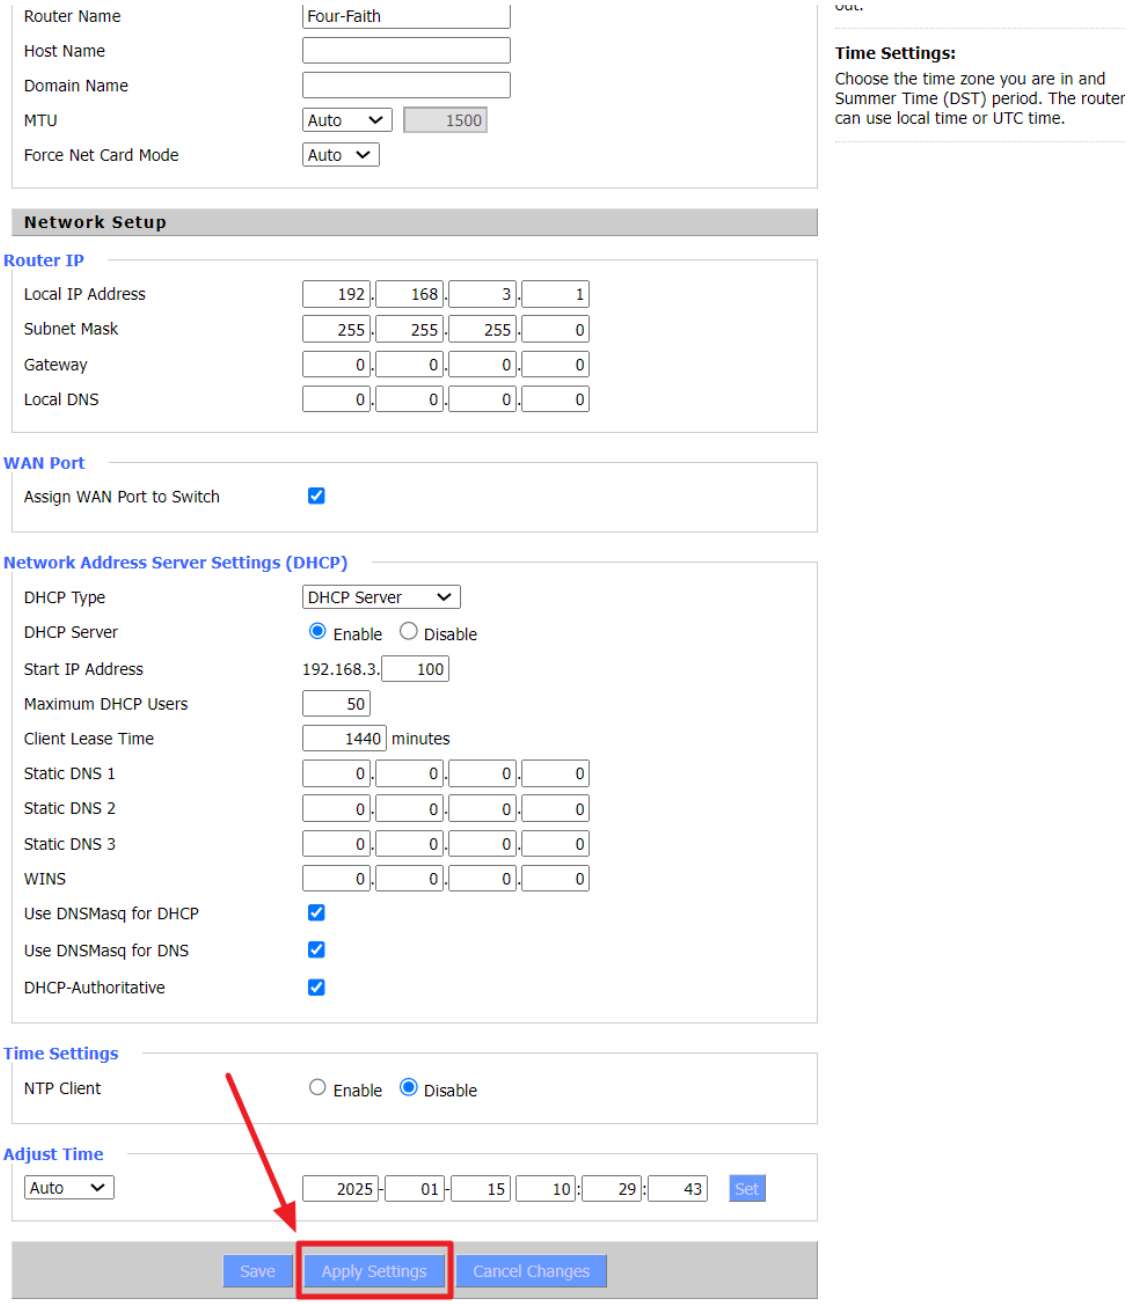


- Find the APN Settings and then enter the user APN parameters
- Click the Apply Setting button and wait for parameters to be delivered successfully

Confirm networking status

- Click Status button
- Find the WAN information, confirm that the SIM card is identified, and confirm that the signal quality is normal

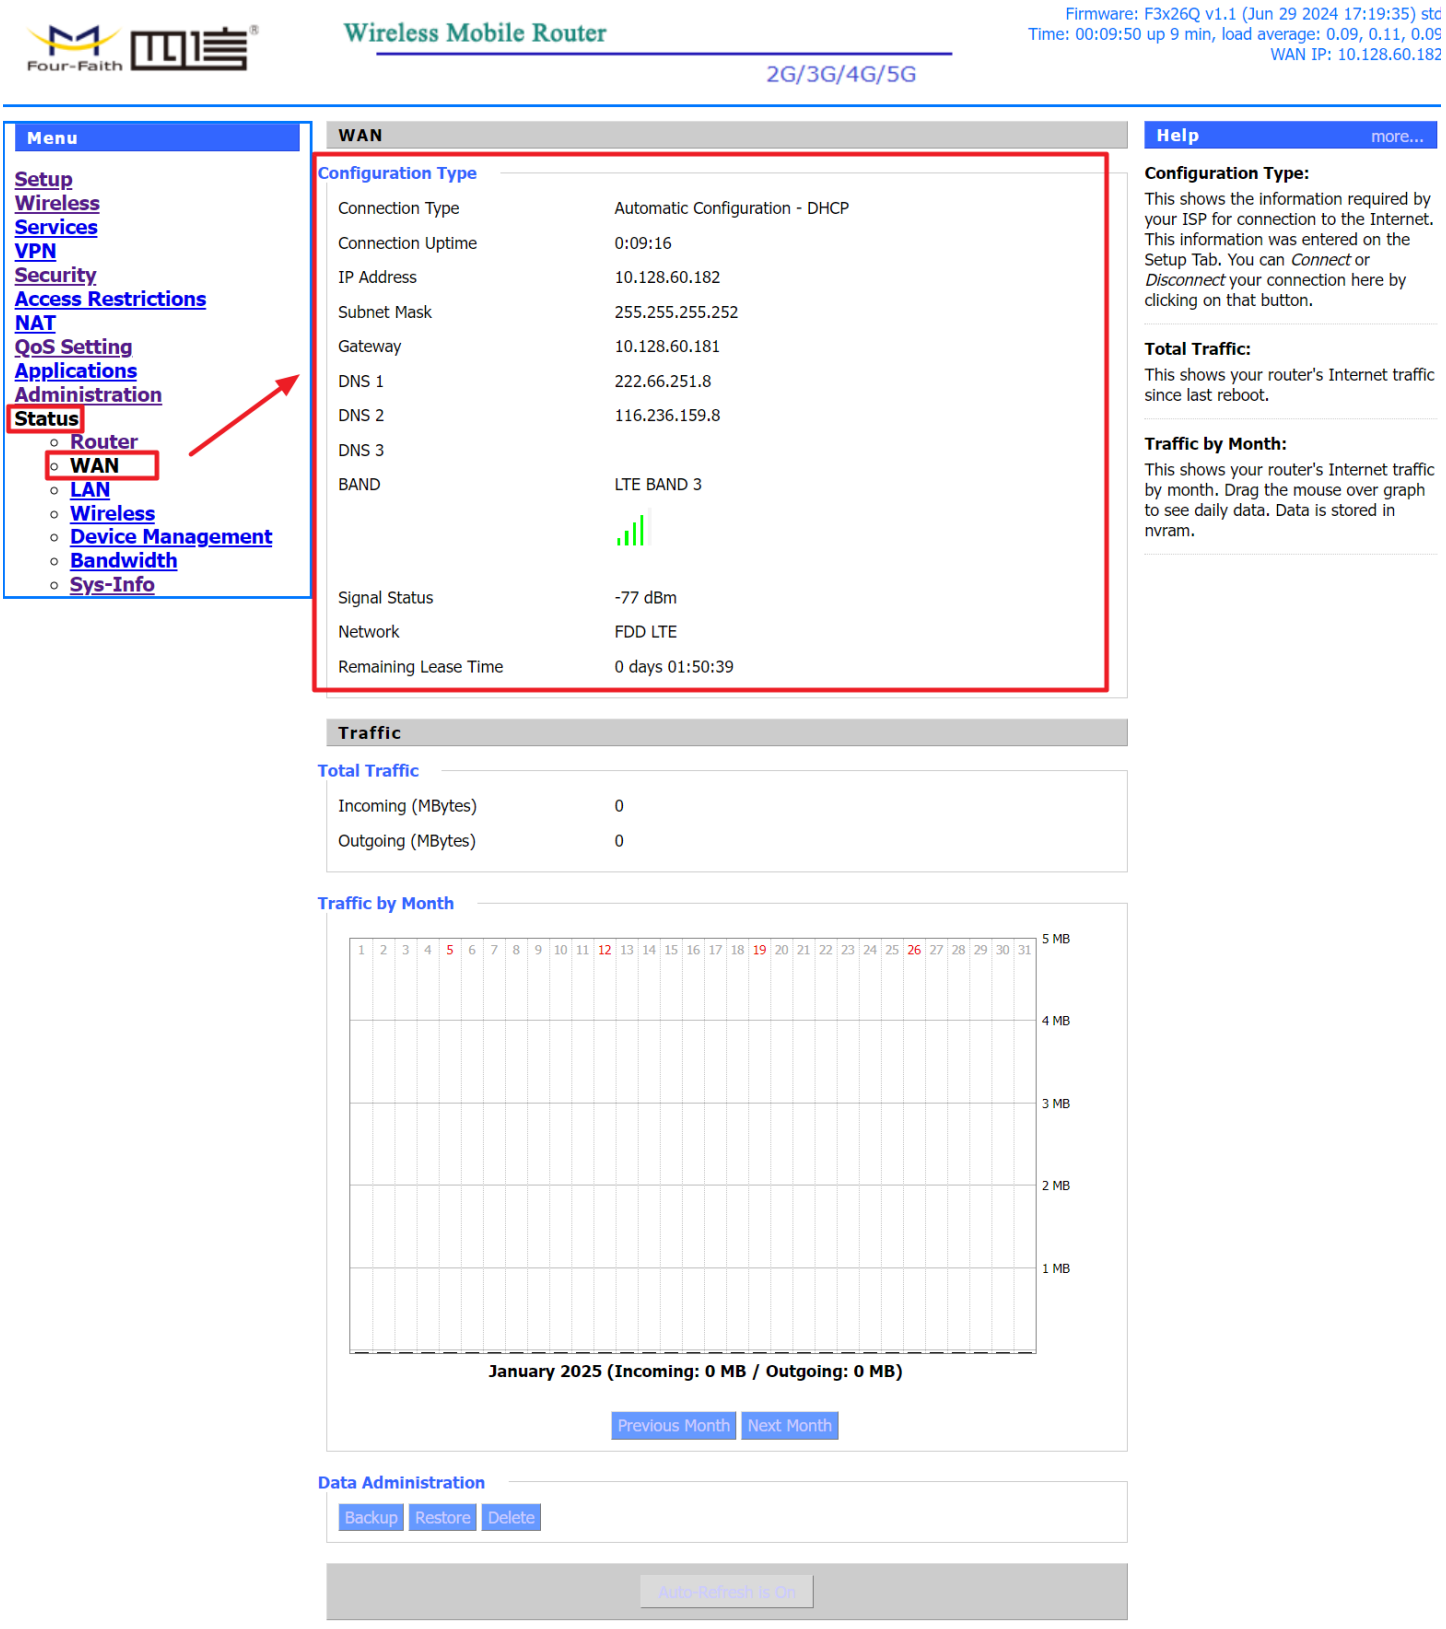

- At this time, the charging pile network icon is normally lit, and the charging pile displays the active state

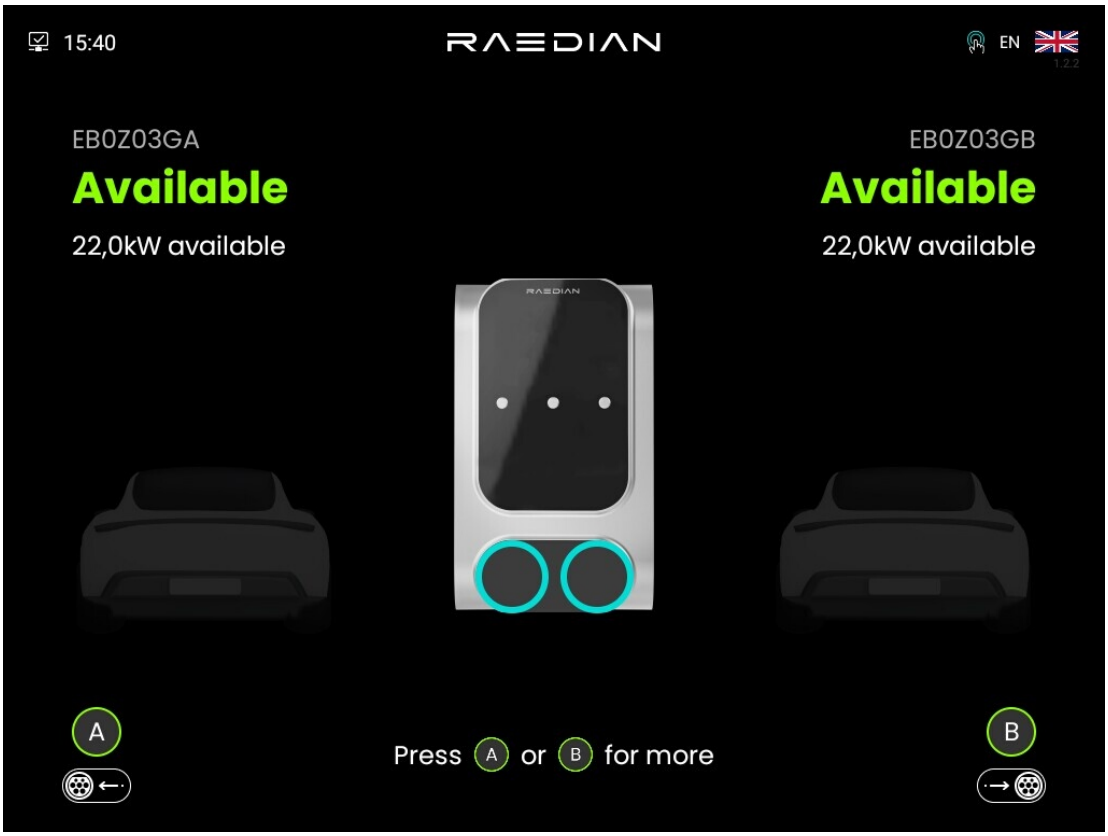
15:40
RAEDIAN
EN
1.2.2
EB0Z03GA
Available
22,0kW available
EB0Z03GB
Available
22,0kW available
A
Press A or B for more
B