GV50CG Quick Start

Page 1: Basic Operation

1 Check Parts List





The Micro USB Cable is not in the delivery list. Please contact your vendor for it.

2 Open the case



3 Install a SIM Card



Install the battery



4 Close the case



5 Find **Queclink_Driver_AsrV2.0.1.0.zip** in develop suit and install the driver. If you have already installed it, please go to **Step 6**.

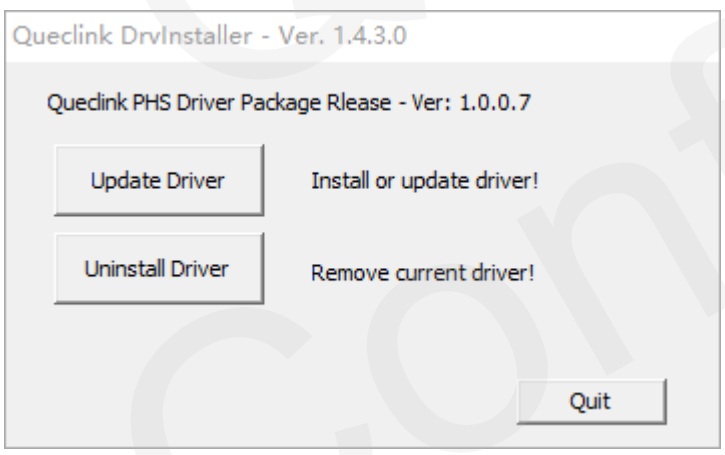

6 Connect GV50CG to computer by Micro USB Cable.

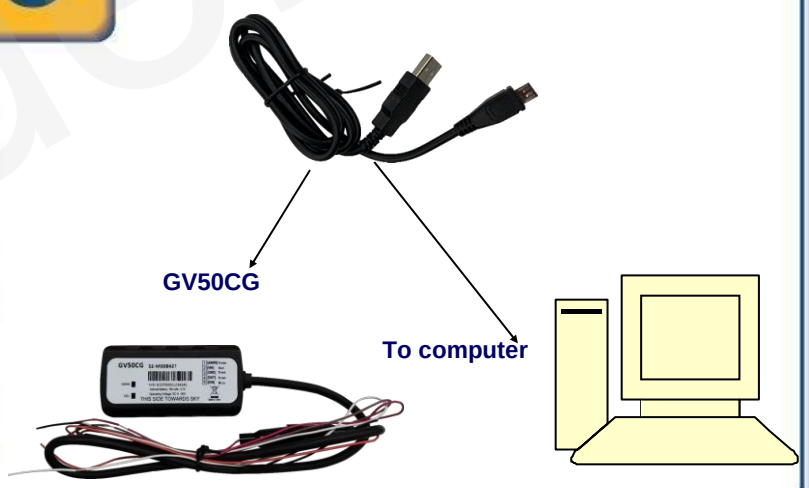

7 Find "**Queclink @Track MT Setup Vx.x.xx.exe**" in develop suit and run it to configure the running parameters of GV50CG.
Please refer to **Page 2** for details.

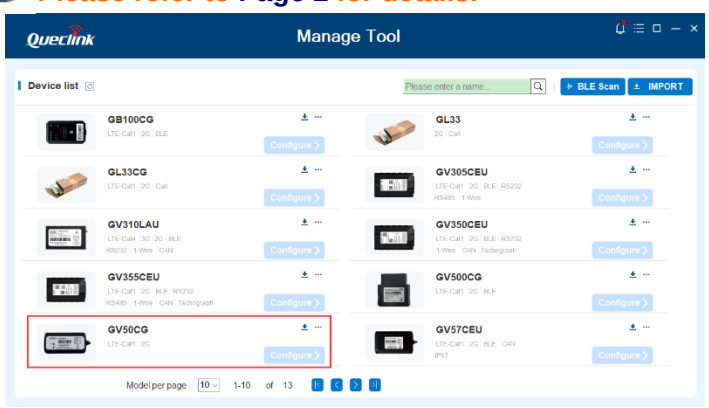

8 Before using GV50CG for the first time, please fully charge the battery.





Page 2: PC Manage Tool Quick Start

1

After the Tool is installed successfully, please open the Manage Tool and then click Configure.

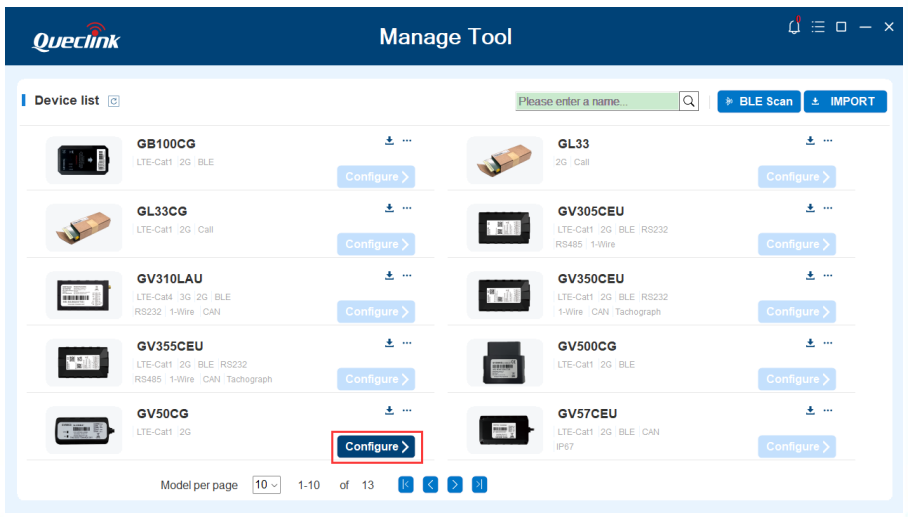

2

If you want to test the GV50CG by SMS, then set **Report Mode** to **SMS** and input the phone number which you want to receive the SMS from GV50CG. After that you can go to **Step 6.**
Otherwise please go to **Step 3**

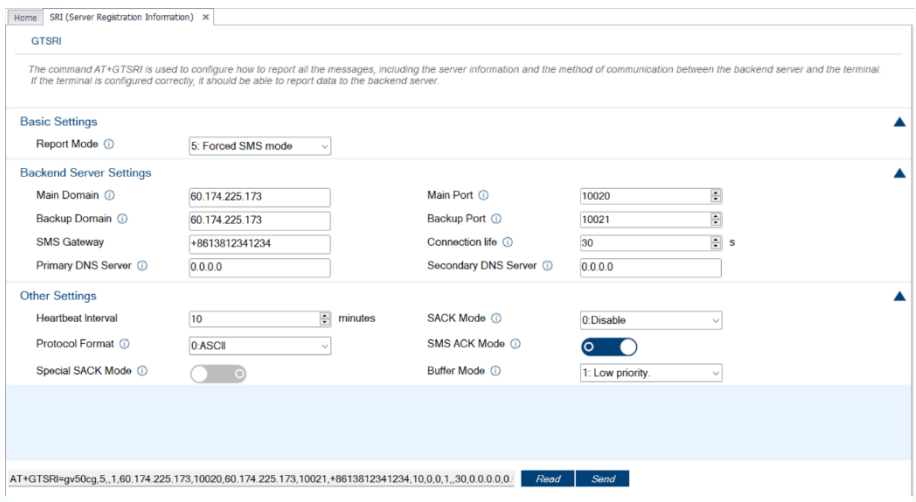

3

Set **Report Mode** to **TCP Short Connection**. Input the IP address and port number of the backend server. Please make sure the IP address can be accessed by internet and the data sent to this address can be received.

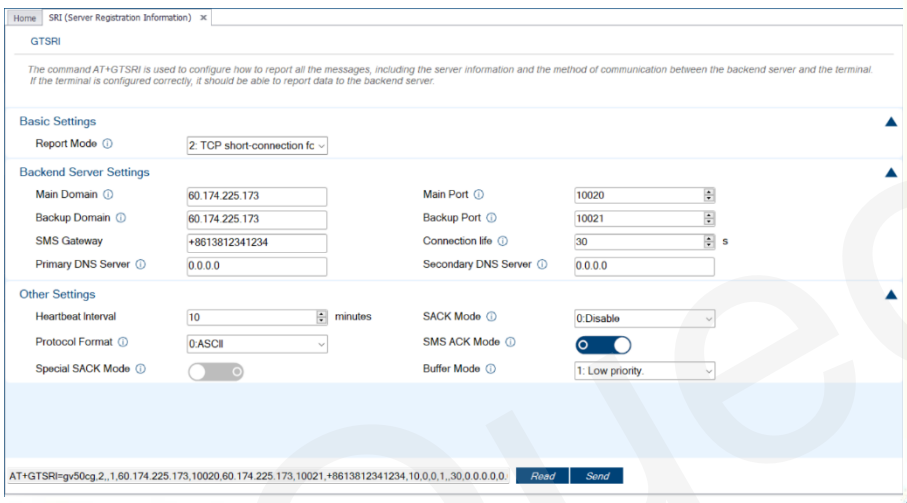

4

Please contact your SIM card provider and get the APN information for GPRS. Input it in AT+GTBSI setting.

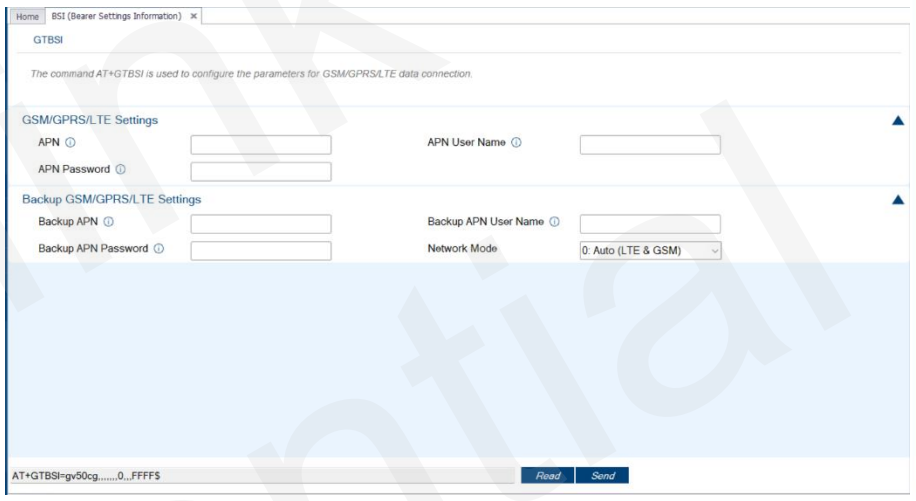

5

Press the **Send** button and update the parameters of GV50CG. Then GV50CG can report information to your backend server or SMS receiver.
Note: These commands can also be sent to GV50CG by SMS.

```
AT+GTBSI=gv50cg,,,,,,,0,,,FFFF$
```

Command has been accepted when you see the window below.

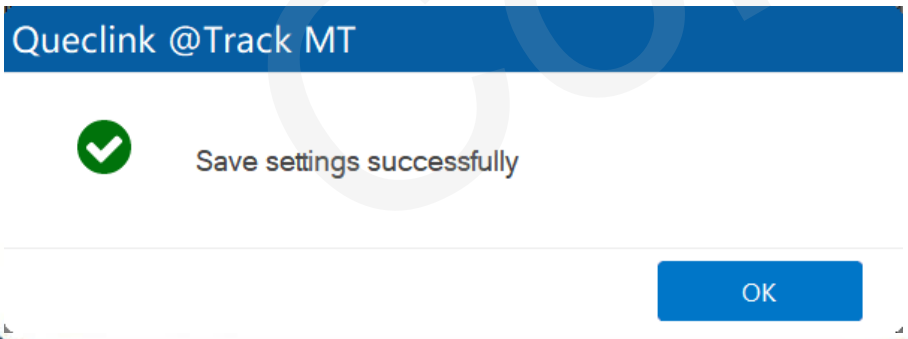

6

Set the parameters of fixed time report so that GV50CG will report its position to backend server periodically. Press **Send** button to update the parameters.
The following screenshot shows how to configure GV50CG to report its position every 3 minutes.

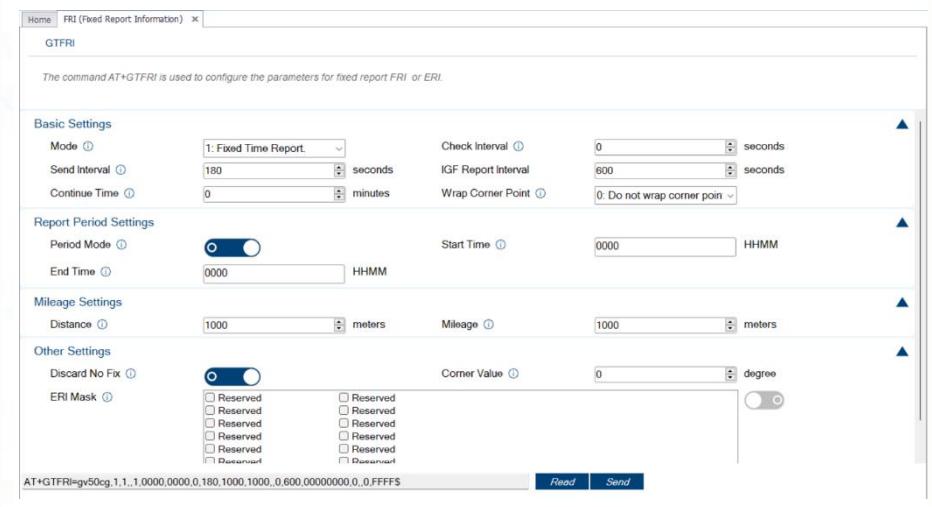

7

The following screenshot shows how to create a Geo-Fence rule. Press **Send** button to update the parameters.

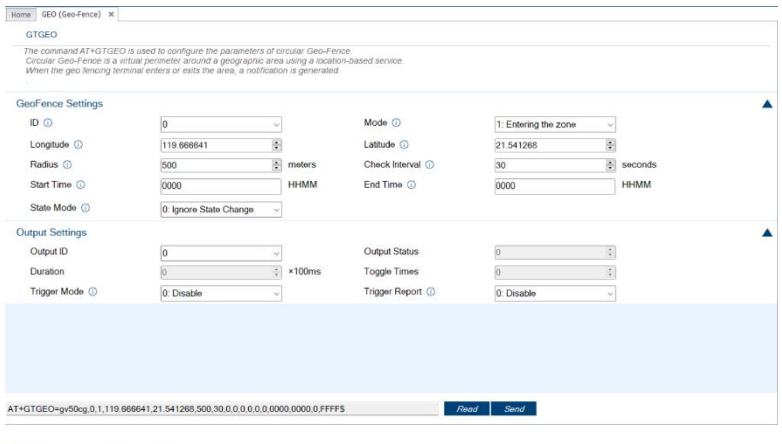

After these steps, GV50CG will have some basic tracking functions like fixed time report and Geo-Fence. For other advanced functions of GV50CG, please refer to *GV50CG @Track Air Interface Protocol* or visit our website.

http://www.queclink.com
sales@queclink.com